

## BY ABSOLUTE SHEET METAL LLC

2018 Catalog

# Ford Cars





When you want it **BITCHIN**... Call 1-928-420-1254 to Order! www.absolutesheetmetal.com

Terms & Conditions of Sale

Absolute Warranties All Products Manufactured to Be Free From Defects In Both Material and /or Workmanship for a Period of Thirty (30) Days From Date of Sale. If for Any Reason The Buyer is Not Satisfied With Any Product Manufactured & Sold By Absolute Just Return The Item(S) Within Thirty (30) Days From Date of Sale for Refund or Exchange to The Place or Origin. If Such Item or Products is Not a Manufacturing Defect, it is Subject to a 20% Restocking Charge. Proof of Purchase is Required From Absolute Sheet Metal. See No. 8 Below.

Notice to Buyers Ordering: You May Order By Mail, Telephone, Fax Machine, E-Mail. All Absolute Kits Are Shipped Ups. We Accept MasterCard, Visa or American Express. Please Include All Pertinent Information When Ordering Parts. Give Us The Model & Year of Your Vehicle & Use The Part Numbers When Possible. List Your Phone Number & Area Code.

- 2. Prices: All Prices Are F.O.B. Chino Valley, AZ., USA & Stated In U.S. Dollars. Prices Are Effective on The Date Shown & Subject to Change Without Prior Notice or Approval. In The Event of a Substantial Increase In Price, You Will Be Notified Prior to Shipment of Your Order.
- 3. Packaging: The Goods Will Be Packed In Accordance With Seller S Then Prevailing Packaging. Buyer Shall Pay All Costs for Special Packaging Requested By The Buyer.
- 4. Personal Check: Prepayment By Check is Also Welcome, However, Some Delay May Occur Due to Bank Clearance Time. Also Note That You Should Call Our Shipping Department to Find Out What The Shipping Costs Will Be Along With Your Product Order.
- 5. Shipping: All Orders Are Shipped Via UPS Oversize or Overweight Items Will Be Shipped Regular Ground & Extra Shipping Charges Will Be Added to The Invoice.
- 6. Shortages: Examine Your Order Carefully. Call Immediately Upon Finding Any Shortages. No Allowances Will Be Made for Shortages Unless We Are Notified Within 5 Days With The Invoice Number & Its Date.
- 7. Damaged Goods or Risk of Loss: Shall Be on The Buyer From The Time Seller Delivers The Goods to a Carrier for Shipment to Buyer, Without Reference to The Type of Shipment. Seller Shall Not Be Liable for Any Loss or Damage Sustained In Transit. Buyer Must Assert Claims for Damages In Transit Against The Carrier.
- 8. Returns: You May Return Any Kit or Parts Ordered, But Not Parts of Kits, for Up to 30 Days After The Original Ship Date. All Returns, However, <u>Must</u> Be Made Within The 30 Days From Receipt. This Includes Flawed or Incorrect Merchandise. <u>No Exceptions.</u>
- Any Merchandise to Be Returned to Absolute Must Have a Return Authorization Number Issued By Our Shipping Dept., Which Can Be Reached During Regular Working Hours At (928) 420-1254. The Return Policy is As Follows:
- 1. You Must Be Issued a Return Authorization Number.
- 2. You Must Return Merchandise to Us Within 30 Days of Receiving a Return Number. The Number Must Be Visible on The Outside of The Returning Container.
- 3. All Returns Must Be "Pre-Paid Shipping" & Fully Insured, As We Cannot Accept Collect Shipments.
- 4. In Cases Where a Return is Due to Our Error, We Will Refund "Pre-Paid" Freight Charges. After 30 Days All Sales Are Final.
- 5. Merchandise Shipped In Error, or Has Flaws Due to Craftsmanship or Defects In Materials, Will Be Immediately Exchanged or Refunded At No Charge. Merchandise Returned for Any Other Reason Will Be Charged a 20% Restocking Fee 1-30 Days From Original Ship Date. Product Must Have Been Purchased Directly From Absolute & Accompanied With a Copy of The Purchase Invoice.
- 9. Refused Shipments: Any Customer Who Refuses a Delivery of an Order (Damaged Shipment Excluded) Will Be Required to Pay The Additional Return Freight Charges. These Charges Must Be Paid In Full Before Any Future Orders Will Be Shipped.
- 10. Back Orders: We Maintain a Back Order Program. If Your Full Order Cannot Be Shipped In Total, We Will Place The Balance of Your Order Into Back Order Mode.
- 11. Tax: In Addition to Quoted Purchase Price, Buyer Shall Pay Any Tax Which Seller May Be Required to Pay or Collect Under Any Existing or "Future" Law, Upon or With Respect to The Sale or Purchase of Absolute Merchandise.
- 12. Manufacturer S Right Retained: Absolute Reserves The Right to Make Changes In Design or to Make Additions to or to Improve Upon Any Product At Any Time Without Incurring Any Obligation Whatsoever to Install The Same or Improve Upon Products Previously Manufactured.
- 13. Notice to All Buyers; Absolute Cannot Control The Application, Installation, Modification or Utilization of Our Products By Our Customers. Accordingly, No Express Warranties Are Given & The Company Makes No Warranty of Merchantability. The Products Are Sold on an "As is" Basis.
- 14. Specifications: The Product Shall Meet Seller S Standard Specifications Unless Buyer, In Placing The Order, Makes a Written Request for Reasonable Variations & Seller Expressly Agrees, In Writing, to Make Such Variations.
- 15. Testing: Buyer, In Addition to The Purchase Price, Shall Pay All Cost Incurred In Connection With Any Testing to Determine Whether The Goods Meet The Particular Specification of The Buyer. Buyer Must Specify Such Special Testing Requirements At Time of Order.
- 16. Patents: Buyer Shall, In Respect to Goods Packaged By Seller In Accordance With Designs, Processes, Formulas or Supplies,
- Determined, or Requested By Buyer, Defend, Indemnify, & Hold Harmless, Seller, it's Successors & Assigns From & Against Any Claim, Loss, Damage or Expense, Including Attorney S Fees, Arising Out of Any Infringement or Claim of Infringement of Any Letters Patent, Trade Name, Trademark, Copyright, or Trade Secrets By Reason of The Use of Such Designs, Processes, or Formulas. Seller Shall Promptly Notify Buyer of Such Claim or Infringement No Returns Will Be Accepted After 30 Days From Shipping.

## **1928-31 FORD CARS**



TECHNICAL INFO FOR FIREWALLS	2
28-29 FIREWALLS	2
30-31 FIREWALLS	2
FLOORBOARDS	3
CHECK OUT OUR SUPER SAVER KITS!	4
CHECK OUT OUR SUPER SAVER KITS!  SMOOTHIE RUNNING BOARDS	
	5
SMOOTHIE RUNNING BOARDS	5 5

**NOTICE:** Many 28/31 FORD Passenger and Truck Parts are the same. Check the 28/31 truck section for more parts.

Prices are subject to change without notice.

#### The Set-Back Information Provided on This Page Is For your Information

These references are to help you decide which firewall kit will best fit your particular application. There are many factors which will affect your choice of kits. Engine set-back, radiator core thickness, air conditioning or superchargers. You need to determine the length of the engine package you intend to install and then figure out the distance you have from the back of the radiator core to the stock or existing firewall. By doing this, you will know how much extra room or set-back you will need. The firewall only fits in one place in the body, but your engine can be moved forward or backward as much as needed to obtain proper clearances. If you have any questions, please call our customer service line at (928) 420-6346.

#### 28 - 29 FORD FIREWALLS & TECHNICAL INFORMATION



#### **281000** 28-29 FORD FIREWALL KIT

This is the complete firewall kit consisting of the upper and lower sections.



#### **281002** 28-29 LOWER FIREWALL KIT

The lower section may be used with the stock upper section which is very near the stock fuel tank. Be careful when welding near it. Yes, you can still squeeze the old V-8 into place.




#### 281003 28-29 UPPER FIREWALL KIT


The upper section can be used with the stock lower firewall if you so desire. Just the thing if you are running a V-6 and want to spruce up the engine compartment a bit.

Installation
Video Now
Available on
YouTube!

The 28 and 29 firewalls were among the first products manufactured by us for the Street Rodder. The upper or lower sections may also be purchased separately. Since the 28 and 29 Model 'A' cowl is very small, we only make one set-back firewall kit for these bodies. These firewalls are precision built from 16 gauge cold rolled steel. Each kit comes complete with all the instructions, ready for you to install (we also manufacture complete front floorboard kits to match up to all our firewalls).

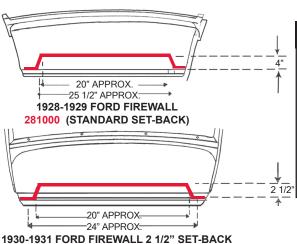

#### 1930-1931 FORD FIREWALL 2 1/2" SET-BACK 301005 2 1/2" SET-BACK

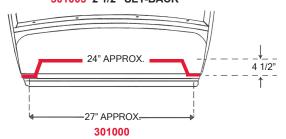

### 30 - 31 FORD FIREWALLS



#### 301005 30-31 SMALL BLOCK FIREWALL KIT

This firewall has an appropriate 2 1/2" Set-back from the cowl front edge. REMEMBER, your original firewall protruded forward 2" from the edge of your cowl; therefore, your total set-back from the position of your stock firewall will be 4 1/2".



#### 301000 30-31 BIG BLOCK FIREWALL KIT

Need more engine room? This kit has it. This firewall has a 4 1/2" set-back from the front edge of your cowl. REMEMBER, your stock firewall protruded 2"; therefore, our total set-back from the position of your stock firewall is now 6 1/2".

ALL SET-BACK MEASUREMENTS ARE TAKEN FROM THE COWL EDGE WITH THE STOCK FIREWALL REMOVED. KEEP IN MIND THE FACE OF THE STOCK FIREWALL PROTRUDES ABOUT 2" IN FRONT OF THE COWL EDGE.

NOTE: These firewalls are designed for the most popular engine-transmission conversion which is Chevy engine and GMC turbo transmission. Any other engine installation (Ford, Mopar, etc.) may require rework of the bell housing area of the firewall.

#### FLOORBOARDS



#### NOTE:

The complete floorboard kits do not come with the last pan over the rear end. The many frame manufacturers. make their frames very differently... making it impossible to manufacture a standard pan that fits all cars.

281008

281005 28-29 FORD FRONT FLOORBOARD KIT

281009


All models including the ford trucks are designed for our firewalls.



281056 28-29 FORD PICKUP REAR FLOOR PAN

**281008 28-31 FORD UNDER SEAT PAN** (Does not fit 30-31 Coupes).... **\$90.00** 

281009 28-31 FORD PAN-BEHIND-SEAT (All Models) .......\$95.00

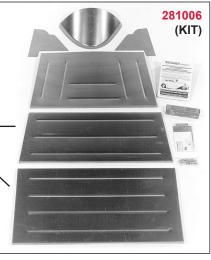

281006 COMPLETE FLOOR KIT

281014 COMPLETE FLOOR KIT

(Fits - 30-31 Coupe) .....\$320..00

## Bitchin Super Saver Kit



## Ford Passenger

Firewall and Floor Kit Roadster, Coupe, Sedan





Kit includes: (1) 281000 Firewall (\$320) (1) 281006 Complete Floorboard (\$320)

Kit Price \$590

28-29



#### Ford Passenger Firewall and Floor Kit

Roadster and Sedan





Big Block Kit includes:

(1) 3 01000 Firewall (\$350)

(1) 281006 Complete Floorboard (\$320)

Kit Price \$620<sup>00</sup>

Small Block Kit includes:

(1) 3 01005 Firewall (\$320)

(1) 281006 Complete Floorboard

(\$320)

Kit Price \$59000

30-31

# \$50<sup>00</sup>

#### Ford Passenger Firewall and Floor Kit

Coupe





Big Block Kit includes:

(1) 3 01000 Firewall (\$350)

(1) 281014 Complete Floorboard (\$320)

Small Block Kit includes:


Kit Price \$620<sup>00</sup>

(1) 3 01005 Firewall (\$320)(1) 281014 Complete


Floorboard (\$320)

30-31 Kit Price \$590<sup>00</sup>

#### SMOOTHIE RUNNING BOARDS

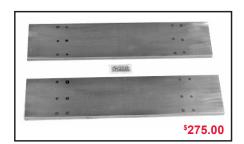

281055 28-29 FORD SMOOTHIE RUNNING BOARD KIT

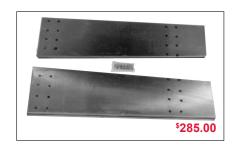

301022 30-31 FORD SMOOTHIE RUNNING BOARD KIT

We manufacture one of the nicest smoothie all steel running boards on the market today. It is made out of 16 gauge cold rolled steel and is a quality piece of work.

The fit and detail is superb and if your project demands the best, these running boards will fill the bill. As always, we manufacture all of our parts in our Prescott area facility.

CALL 1-928-420-1254 TO ORDER TODAY!



CALL 1-928-420-1254 TO ORDER TODAY!

#### DEEP WHEEL WELL KITS



281023 28-29 FORD SEDANS & PHAETONS




281024 28-31 FORD COUPES & ROADSTERS



**301019** 30-31 FORD SEDANS

Our deep wheel well kits will help you eliminate tire interference often encountered with those wide pro-street tires, off-set wheels, independent suspension or normal body roll on sedans. Our wheel wells come in standard width of 8". Deeper wheel wells can be special ordered for an additional cost of \$35.00.

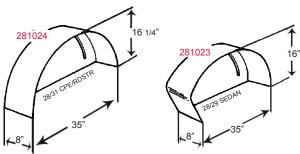

#### UNIVERSAL FLOORS



901030 \$295 All Purpose Front Floor Kit



901035 \$250 All Purpose Rear Floor Kit


#### BATTERY BOXES

#### **BATTERY BOXES**

Group 42	901020	\$99.00
Group 71	901006	\$99.00
Optima Box	901040	\$99.00

Mounting a battery in a street rod has always created problems, some major ans some minor. Our battery box kits will solve most of the problems. The universal mounting brackets supplied with these kids allow you to choose the mounting method which best suits your application, including flush floor mounting, side mounting, or halfway through the floor for extra ground clearance. We offer three kits. The positive battery hold down, adequate ventilation and cable protection give added security to your battery installation.

Group 42: 9 3/4 L x 7 W x 7 1/2 H Group 71: 8 1/2 L x 7 1/4 W x 9 1/4 H Optima: 10 1/2 L x 7 1/4 W x 8 1/2 H

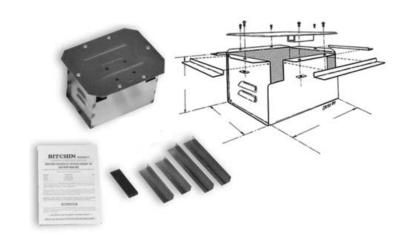

#### UNIVERSAL DEEP WHEEL TUB



901010 \$325 Deep Wheel Tubs Universal

14", 36 ¼", 16"

You Plan on Putting Wide Wheels and Tires on Your Car or Pro-Streeting it, We Have Just What You Need. Our Universal Deep Wheel Tub Kit (No. 901010) Was Designed for Just That. These 18 Gauge Cold Rolled All Steel Wheel Tubs Are 36" From End to End and a Full 14" Deep. You Can Install These Beauties In As Deep As You Like for Your Particular Project. All Our Deep Wheel Tub Kits Have Mounting Angles.

## 1932 FORD CARS



TECHNICAL INFO FOR FIREWALLS	7
FIREWALL KITS - STEEL	7
FRONT FLOORBOARDS	8
REAR FLOORBOARDS	8
CHECK OUT OUR SUPER SAVER KITS!	9
DEEP WHEEL WELL KITS	10
COWL VENT FILLER	10
UNIVERSAL PARTS	11

All Prices are subject to change without notice.

#### 32 FORD FIREWALLS & TECHNICAL INFORMATION



#### 321040 32 FORD FIREWALL KIT Small Block

The small block firewall has a 2 3/4" setback from the front edge of your stock cowl. It enables you to install most small block modern engines.




#### 321042 32 FORD FIREWALL KIT Big Block

For those of you that need a little more room for those big motors, this firewall has a 5" set-back.



### 321050 32 FORD FIREWALL KIT Hemi

Developed in 2006 - After numerous requests for something for Hemis. We went to a 29 ¼' wide, 5" deep firewall that's about as big as you can bolt back into a '32.

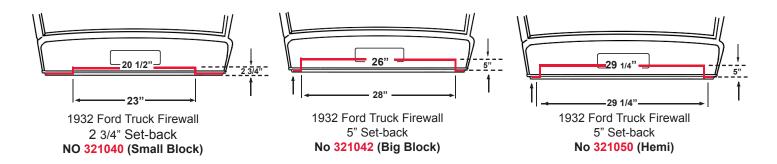

#### THE SET-BACK INFORMATION PROVIDED ON THIS PAGE IS FOR YOUR INFORMATION ONLY

Many factors will affect your choice of kits; engine set-back, radiator core thickness, air conditioning or superchargers. First determine the length of the engine package you intend to install and then figure out the distance you have from the back of the radiator core to the stock or existing firewall. By doing this, you will know how much extra room or set-back you will need. The firewall only fits in one place in the body, but your engine can be moved forward or backward as much as needed to obtain proper clearances. If you have any questions, please call our customer service line at (928) 420-1254.

NOTE: These firewalls are designed for the most popular engine-transmission conversion which is Chevy engine and GMC turbo transmission. Any other engine installation (Ford, Mopar, etc.) may require rework of the bell housing area of the firewall.






www.absolutesheetmetal.com



#### FRONT FLOORBOARDS

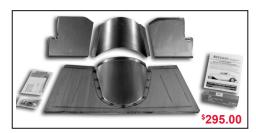


321025 32 FORD FRONT FLOOR KIT Universal

This kit is called a universal because it is designed to fit up to your stock firewall.



321043 32 FORD FRONT FLOOR KIT Big Block

This kit will fit up to our big block firewall (#321042). It is constructed from 16 gauge steel.

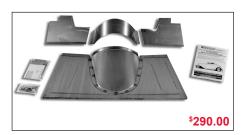

321041 32 FORD FRONT FLOOR KIT Small Block

Made of 16 gauge steel - This kit is designed to fit the Bitchin Parts firewall # 321040.



#### REAR FLOORBOARDS



321080 32 FORD 3-WINDOW REAR FLOORBOARD KIT



321085 32 FORD 5-WINDOW & ROADSTER REAR FLOORBOARD KIT




321088 32 FORD 2-DOOR SEDAN REAR FLOORBOARD KIT



321090 32 FORD 4-DOOR SEDAN REAR FLOORBOARD KIT



321112 32 FORD CABRIOLET REAR FLOORBOARD KIT



321077 32 FORD UNDERSEAT PAN

## Bitchin Super Saver Kit











Kit includes: (1) 321040 Small Block Firewall (\$390)

(1) 321041 Front Floorboard (\$290)

Kit Price \$626.00

Kit includes: (1) 321042 Big Block Firewall (\$410) (1) 321043 Front Floorboard (\$290)

Kit Price \$646.00

www.absoutesheetmetal.com



#### ACCESSORIES



321097 32 PASS & 32-34 PU FORD COWL VENT FILLER

#### DEEP WHEEL WELL KITS



321028 32 FORD COUPE & ROADSTER WHEEL WELL KIT

321028 16 1/8"

16 1/8"

8" Deep Kits includes one pair

We have designed and now manufacture a deep wheel well that will provide adequate clearance for most tires and wheels or independent rear ends. These parts are made out of 18 gauge cold rolled steel. The flanges are a standard 8" deep

If you have a need for a deeper wheel well we will custom make it for you for \$35.

Call our Service Dept. @ (928) 420-1254 for additional info.



321092 32 FORD SEDAN WHEEL WELL KIT





#### UNIVERSAL FLOORS



901030 \$295 All Purpose Front Floor Kit



901035 \$250 All Purpose Rear Floor Kit


#### BATTERY BOXES

#### **BATTERY BOXES**

Group 42	901020	\$99.00
Group 71	901006	\$99.00
Optima Box	901040	\$99.00

Mounting a battery in a street rod has always created problems, some major ans some minor. Our battery box kits will solve most of the problems. The universal mounting brackets supplied with these kids allow you to choose the mounting method which best suits your application, including flush floor mounting, side mounting, or halfway through the floor for extra ground clearance. We offer three kits. The positive battery hold down, adequate ventilation and cable protection give added security to your battery installation.

Group 42: 9 3/4 L x 7 W x 7 1/2 H Group 71: 8 1/2 L x 7 1/4 W x 9 1/4 H Optima: 10 1/2 L x 7 1/4 W x 8 1/2 H

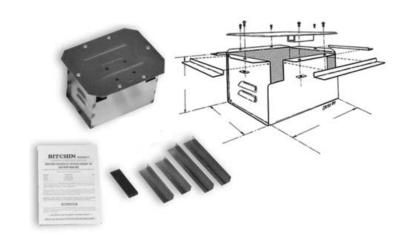

#### UNIVERSAL DEEP WHEEL TUB




901010 \$325 Deep Wheel Tubs Universal

14", 36 1/4", 16"

You Plan on Putting Wide Wheels and Tires on Your Car or Pro-Streeting it, We Have Just What You Need. Our Universal Deep Wheel Tub Kit (No. 901010) Was Designed for Just That. These 18 Gauge Cold Rolled All Steel Wheel Tubs Are 36" From End to End and a Full 14" Deep. You Can Install These Beauties In As Deep As You Like for Your Particular Project. All Our Deep Wheel Tub Kits Have Mounting Angles.

## **1933-34 FORD CARS**

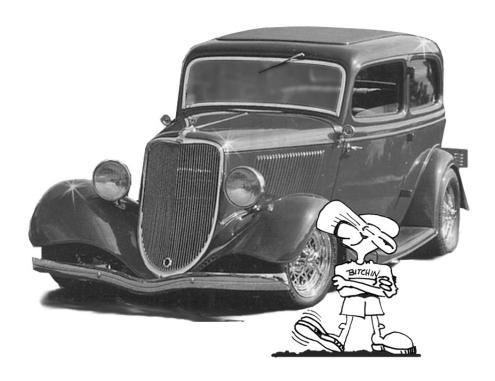

	_
TECHNICAL INFO FOR FIREWALLS	13
FIREWALLKITS	14
FRONT FLOORBOARDS	14
REAR FLOORBOARDS	14
DEEP WHEEL WELL KITS	14
CHECK OUT OUR SUPER SAVER KITS!	15
UNIVERSAL PARTS	16

All Prices are subject to change without notice.


#### FIREWALL TECHNICAL INFORMATION

#### THE SET-BACK INFORMATION PROVIDED ON THIS PAGE IS FOR YOUR INFORMATION ONLY


These references are to help you decide which firewall kit will best fit your particular applicatio

There are many factors which will affect your choice of kits; engine set-back, radiator core thickness, air conditioning or super chargers. You need to determine the length of the engine package you intend to install and then figure out the distance you have from the back of the radiator core to the stock or existing firewall. By doing this you will know how much extra room or set-back you will need. The firewall only fits in one place in the body, but your engine can be moved forward or backward as much as needed to obtain proper clearances. If you have any questions, please call our customer service line at (928) 420-6346.

#### HOW TO MEASURE FOR THE FIREWALL

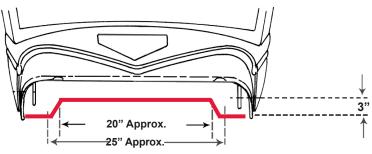

1933-34 FORD FIREWALL - 3" SET-BACK 331051 (Small Block)

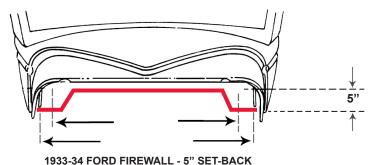

Measure the set-back from the face of the firewall back as illustrated

331008 (Big Block)

Even if your 1933-34 Ford firewall has never had an extra hole, it will take you longer to fill and finish the factory holes you don't want, than to install a new BITCHIN Parts® firewall. The trend in the 1980's and the 1990's has been to relocate the engine by setting it back further to allow you enough room for a thicker radiator core, fans, air conditioning and all those other desired accessories. By using our BITCHIN 16 gauge, made in the U.S.A. all steel firewall kit, you'll have the room you want. Our kit will give you that smooth modern design everyone likes. We offer two different set-backs for you to choose from.

#### 1933-34 FORD FIREWALLS



331051 33-34 FORD FIREWALL KIT Small Block



331008 33-34 FORD FIREWALL KIT Big Block

All of our kits come with easy to follow instructions you'll need to make your installation quick and easy. Call our service department @(928) 420-6346 for more information if you need it.



Call us @ (928) 420-1254 with any questions. We will be happy to help.

NOTE: These firewalls are designed for the most popular engine-transmission conversion which is Chevy engine and GMC turbo transmission. Any other engine installation (Ford, Mopar, etc.) may require rework of the bell housing area of the firewall

#### FRONT FLOORBOARDS



331053 33-34 FORD FRONT FLOOR KIT Small Block

This kit is designed to match up to our firewall kit #331051



331060 33-34 FORD FRONT FLOOR KIT Big Block

This kit is designed to match up to our firewall kit #331008



331066 33-34 FORD FRONT FLOOR KIT Universal

This kit is designed to be used with your stock firewalls or one modified by yo

#### REAR FLOORBOARDS



331064 33-34 FORD REAR FLOOR KIT Foot Wells



331065 33-34 FORD REAR FLOOR KIT Smoothie



331085 34 VICKIE REAR FLOOR KIT
(Adds onto the rear floorboard kits
Will not work with 1933 Vickies

#### ACCESSORIES



331084 33-34 FORD COWL VENT FILLER

#### DEEP WHEEL WELL KIT



331032 Roadster, Coupe, Sedan



We manufacture wheel wells to fit big tires. The Wells are made out of 18 gauge cold rolled steel, precision formed and ready to install

Standard kits have an 8" deep flange. Deeper wheel wells can be special ordered for an extra \$35.00.

Call our Service Dept. @ (928) 420-1254 for additional info.

## Bitchin Super Saver Kit



www.absolutesheetmetal.com



#### UNIVERSAL FLOORS



901030 \$295 All Purpose Front Floor Kit



901035 \$250 All Purpose Rear Floor Kit


#### BATTERY BOXES

#### **BATTERY BOXES**

Group 42	901020	\$99.00
Group 71	901006	\$99.00
Optima Box	901040	\$99.00

Mounting a battery in a street rod has always created problems, some major ans some minor. Our battery box kits will solve most of the problems. The universal mounting brackets supplied with these kids allow you to choose the mounting method which best suits your application, including flush floor mounting, side mounting, or halfway through the floor for extra ground clearance. We offer three kits. The positive battery hold down, adequate ventilation and cable protection give added security to your battery installation.

Group 42: 9 3/4 L x 7 W x 7 1/2 H Group 71: 8 1/2 L x 7 1/4 W x 9 1/4 H Optima: 10 1/2 L x 7 1/4 W x 8 1/2 H

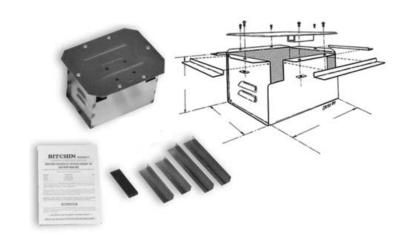

#### UNIVERSAL DEEP WHEEL TUB



901010 \$325 Deep Wheel Tubs Universal

You Plan on Putting Wide Wheels and

14", 36 1/4", 16"

Tires on Your Car or Pro-Streeting it, We Have Just What You Need. Our Universal Deep Wheel Tub Kit (No. 901010) Was Designed for Just That. These 18 Gauge Cold Rolled All Steel Wheel Tubs Are 36" From End to End and a Full 14" Deep. You Can Install These Beauties In As Deep As You Like for Your Particular Project. All Our Deep Wheel Tub Kits Have Mounting Angles.

## 1935-36 FORD CARS



TECHNICAL INFO FOR FIREWALLS	18
FIREWALL KITS	18
COWL VENT FILLER	18
FRONT FLOORBOARDS	19
REAR FLOORBOARDS	19
Trunk floorboards	19
CHECK OUT OUR SUPER SAVER KITS!	20
DEEP WHEEL WELLS	21
STONE GUARD KIT	21
UNIVERSAL PARTS	22

All Prices are subject to change without notice.

#### Order Line: 928-420-1254 Tech Line: 928-420-6346 Fax Line: 928-277-4581

#### 35 - 36 FORD FIREWALLS & TECHNICAL INFORMATION

#### The Set-Back Information Provided on This Page Is For your Information

These references are to help you decide which firewall kit will best fit your particular application. There are many factors which will affect your choice of kits; engine set-back, radiator core thickness, air conditioning or super chargers. You need to determine the length of the engine package you intend to install and then figure out the distance you have from the back of the radiator core to the stock or existing firewall. By doing this you will know how much extra room or set-back you will need. The firewall only fits in one place in the body, but your engine can be moved forward or backward as much as needed to obtain proper clearances. If you have any questions, please call our customer service dept. @ (928) 420-6346.




351071 35-36 FORD FIREWALL KIT Small Block

This small block kit has a set-back approximately 24 1/2" wide and 3" deep. This will handle most of the small block engines without any difficult.





351010 35-36 FORD FIREWALL KIT Big Block

This big block kit has an opening approximately 29" wide and 5" deep for those big muscle type motors.. A lot of these kits are being used for small blocks to allow for even more engine compartment.



351082 35-36 FORD COWL VENT FILLER

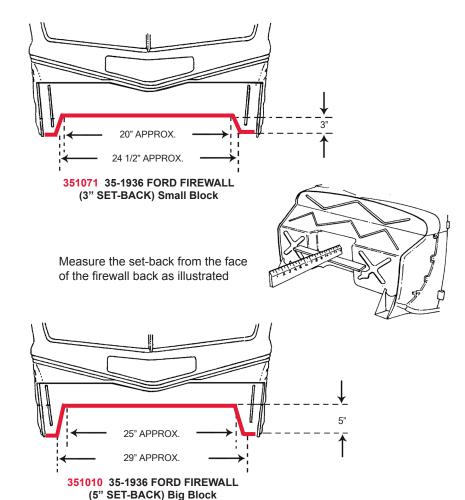

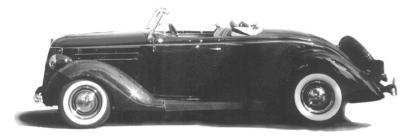

Carol Burnett's 36 Roadster, San Diego, CA

NOTE: These firewalls are designed for the most popular engine-transmission conversion which is Chevy engine and GMC turbo transmission. Any other engine installation (Ford, Mopar, etc.) may require rework of the bell housing area of the firewall

#### WWW.ABSOLUTESHEETMETAL.COM

#### Order Line: 928-420-1254 Tech Line: 928-420-6346 Fax Line: 928-277-4581

#### FRONT FLOORBOARDS



351014 35-40 FORD FRONT FLOOR KIT Big Block

This kit will match up to the 351010 big block Bitchin Firewall.



351073 37-40 FORD FRONT FLOOR KIT Small Block

This kit is designed to match up with 351071 small block Bitchin Firewall.



351077 35-40 FORD FRONT FLOOR KIT Universal

This kit will fit a stock firewall or can be trimmed to fit one you modified on all passenger vehicles from 1935-40.

#### REAR & TRUNK FLOORBOARDS



351049 35-36 FORD REAR FLOOR KIT Sedans



351050 35-36 FORD COUPES & CABRIOLETS



351085 33-36 FORD SEDANS Trunk

REAR FLOOR SPECIFICATIONS INDEX					
BODY STYLE	MFG. TOTALS	REAR FLOOR	TRUNK FLOOR		
2 Door Sedan, Slant Back	463,620	351049	351085		
2 Door Sedan, Hump Back	356,668	351049	351085		
4 Door Sedan, Slant Back	134,603	351049	351085		
4 Door Sedan, Hump Back	155,592	351049	351085		
Roadster	79,271	351050	351090		
3 Window Coupe	46,981	351050	351090		
5 Window Coupe	201,187	351050	351090		
Cabriolet	22,986	351050	351090		
Club Cab Cabriolet (1936 Only)	4,647	351050	351090		

All of the above rear floors will match up to our front floors or your stock floor with very little adjusting. The same is true with the trunk floors; they too will match up to our rear floors or your stock rear floor with very little adjusting. If you have any questions call our customer service department at (928) 420-1254.



351090 35-36 FORD COUPES, CABRIOLET Trunk

The trunk floorboard kits tie into the rear floorboards making it possible for you to have a completely new floor from the firewall to the very back of your car. The trunk kits are made out of 16 gauge cold rolled steel and when installed take on a professional appearance.

## Bitchin Super Saver Kit





(1) 351050 Rear Floorboard (\$365)

Kit Price \$950.00

(1) 351050 Rear Floorboard (\$365)

Kit Price \$980.00

35-36

351801

#### ACCESSORIES




901010 DEEP WHEEL WELLS
Universal (Fits 1935 to 1948 Fords)

If you plan on putting wide wheels and tires on your car or pro-streeting it, we have just what you need. Our universal deep wheel well kit (B.P. No. 901010) was designed just for that purpose. These 18 gauge cold rolled all steel wheel tubs are 36" from end to end and a full 14" deep. You can install these beauties in as deep as you like for your particular project.





Tony Piner, Prescott AZ

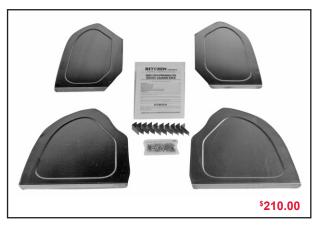

351043 STONE GUARD KIT



Picture this: you have just finished your new street rod, the paint job is all rubbed out and it looks like a million bucks. You go for a little ride in your new machine and all of a sudden, you hear this big clank. Sure enough, your tire picked up a rock and threw it up into the fender and now you have one of those ugly star shaped marks in your paint. Bitchin Parts Stone Guard Kits eliminate that problem.

Each kit has (4) 18 gauge stone shields formed to the contour of your inner fender and mounting to install them. They are not only designed to protect your fenders from road debris, but they replace the existing fender braces. Deduct the cost of the fender braces and these kits are quite a bargain.

#### UNIVERSAL FLOORS



901030 \$295 All Purpose Front Floor Kit



901035 \$250 All Purpose Rear Floor Kit


#### BATTERY BOXES

#### **BATTERY BOXES**

Group 42	901020	\$99.00
Group 71	901006	\$99.00
Optima Box	901040	\$99.00

Mounting a battery in a street rod has always created problems, some major ans some minor. Our battery box kits will solve most of the problems. The universal mounting brackets supplied with these kids allow you to choose the mounting method which best suits your application, including flush floor mounting, side mounting, or halfway through the floor for extra ground clearance. We offer three kits. The positive battery hold down, adequate ventilation and cable protection give added security to your battery installation.

Group 42: 9 3/4 L x 7 W x 7 1/2 H Group 71: 8 1/2 L x 7 1/4 W x 9 1/4 H Optima: 10 1/2 L x 7 1/4 W x 8 1/2 H

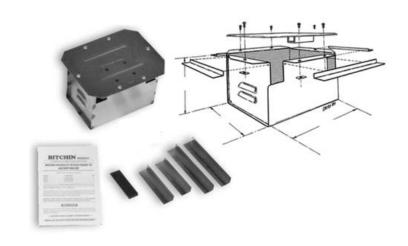

#### UNIVERSAL DEEP WHEEL TUB



901010 \$325 Deep Wheel Tubs Universal

14", 36 ¼", 16"

You Plan on Putting Wide Wheels and Tires on Your Car or Pro-Streeting it, We Have Just What You Need. Our Universal Deep Wheel Tub Kit (No. 901010) Was Designed for Just That. These 18 Gauge Cold Rolled All Steel Wheel Tubs Are 36" From End to End and a Full 14" Deep. You Can Install These Beauties In As Deep As You Like for Your Particular Project. All Our Deep Wheel Tub Kits Have Mounting Angles.

## 1937-40 FORD CARS



Charlotte, NC

TECHNICAL INFO FOR FIREWALLS	24
FIREWALLKITS	24
FENDER APRON KIT, COWL FILLER	24
FRONT FLOORBOARDS	25
REAR FLOORBOARDS	25
TRUNK FLOORBOARDS	25
REAR FLOOR SPECS INDEX	26
CHECK OUT OUR SUPER SAVER KITS!	27
STONE GUARDS	28
DEEP WHEEL WELL KITS	28
DASHBOARDS	28
UNIVERSAL PARTS	29

All Prices are subject to change without notice.

#### 37 - 40 FORD FIREWALLS & TECHNICAL INFORMATION

#### The Set-Back Information Provided on This Page Is For your Information

These references are to help you decide which firewall kit will best fit your particular application. There are many factors which will affect your choice of kits; engine set-back, radiator core thickness, air conditioning or super chargers. You need to determine the length of the engine package you intend to install and then figure out the distance you have from the back of the radiator core to the stock or existing firewall. To do this you will know how much extra room or set-back you will need. The firewall only fits in one place in the body, but your engine can be moved forward or backward as much as needed to obtain proper clearances. If you have any questions, please call our customer service dept. @ (928) 420-1254.



371030 37-40 FORD FIREWALL KIT Small Block

This small block kit has a set-back approximately 24 1/2" wide and 3" deep. This will handle most of the small block engines without any difficulty.




371012 37-40 FORD FIREWALL KIT Big Block

The big block kit has an opening of 29" wide and 5" deep for those big muscle cars. A lot of these kits are being used for small blocks to allow for even more engine compartment room.




371037 37-40 FORD COWL VENT FILLER

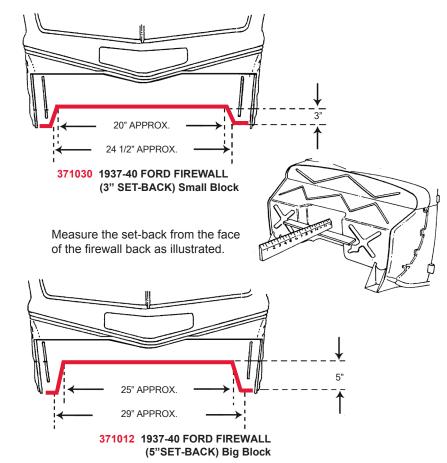

NOTE: These firewalls are designed for the most popular engine-transmission conversion which is Chevy engine and GMC turbo transmission. Any other engine installation (Ford, Mopar, etc.) may require rework of the bell housing area of the firewall.



391000 39-40 POSI-ALIGN FENDER APRON KIT (Also fits: '39-41 Sed. Del. & '40-41 PU)

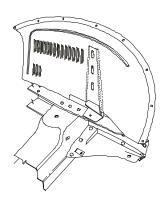

This kit replaces the old sling shot type core support and moves the hanger out onto the frame.

#### FRONT FLOORBOARDS

For years Bitchin Parts has manufactured front floors for the 39-40 Ford passenger cars. After a lot of research and looking at each of the different Ford models between 37 and 40 we gathered enough info to produce the rest of the floors. Refer to the specs chart (on next page) to determine the exact rear or trunk floor your particular car needs. Each rear floor and trunk kit is made of 16 gage cold rolled steel and comes with all instructions needed to install your kit. If you have any questions call our customer service department at (928) 420-6346.

#### NOTICE: Please see next page for specs and details on our rear or trunk floor kits



351073 37-40 FORD FRONT FLOOR KIT Small Block

This kit is designed to match up with Bitchin Parts small block firewall 371030



351077 37-40 FORD FRONT FLOOR KIT Universal

This kit will fit up to your stock firewall or can be trimmed to fit a modified firewal



351014 37-40 FORD FRONT FLOOR KIT Big Block

This kit is designed to match up with Bitchin Parts big block firewall 371012

#### REAR & TRUNK FLOORBOARDS



**371006** 37-40 FORD REAR FLOOR KIT



371055 37-38 FORD TRUNK KIT Cabriolet



371062 39 FORD TRUNK KIT Convertible



371050 37-38 FORD TRUNK KIT Standard Sedan & Coupe



371060 39 & 40 FORD TRUNK KIT Standard & Deluxe



371065 39-40 FORD TRUNK KIT Coupe & Deluxe

NOTICE: Please see next page for specs and details on our rear or trunk floor kits

All of our rear floors will match up to our front floors or stock floors with very little adjustment. All our trunk floors will match up to our rear floors or stock rear floors with very little adjustme

Please call our customer service line at (928) 420-6346 with any questions.

REAR FLO	OR SPECS II	NDEX - 37 Pa	assenger Ca	ars
BODY STYLE	MFG. TOTALS		REAR FLOOR	TRUNK FLOOR
2 Door Sedan, Slant Back	328,936		371006	371050
2 Door Sedan, Hump Back	200,129		371006	371050
4 Door Sedan, Slant Back	59,766		371006	371050
4 Door Sedan, Hump Back	109,005		371006	371055
Roadster	1,067	Rumble Seat	351050	351055
Coupe	114,908		371006	371050
Club Coupe	1,067		371006	371050
Cabriolet	9,341	Rumble Seat	351050	371055
Club Cabriolet	6,235	Trunk	371006	371050
REAR FLO	OR SPECS IN	NDEX - 38 Pa	assenger Ca	ırs
BODY STYLE	MFG. TOTALS		REAR FLOOR	TRUNK FLOOR
2 Door Sedan, Standard	82,414		371006	371050
2 Door Sedan, Deluxe	89,105		371006	371060
4 Door Sedan, Standard	17,166		371006	371050
4 Door Sedan, Deluxe	61,063		371006	371060
Coupe, Standard	31,556		371006	351050
Coupe, Deluxe	16,777		371006	371050
Club Coupe	5,393		371006	371050
Cabriolet (Convertible)	3,069	Rumble Seat	351050	371055
Club Cabriolet (Convertible)	4,011	Trunk	371006	371050
REAR FLO	OR SPECS IN	NDEX - 39 Pa	assenger Ca	irs
BODY STYLE			REAR FLOOR	TRUNK FLOOR
2 Door Sedan, Standard			371006	371060
2 Door Sedan, Deluxe			371006	371060
4 Door Sedan, Standard			371006	371060
4 Door Sedan, Deluxe			371006	371060
Coupe, Standard			371006	371065
Club, Deluxe			371006	371065
Convertible, Rumble Seat only			351050	371062
REAR FLO	OR SPECS IN	NDEX - 40 Pa	assenger Ca	ırs
BODY STYLE			REAR FLOOR	TRUNK FLOOR
2 Door Sedan, Standard			371006	371060
2 Door Sedan, Deluxe			371006	371060
4 Door Sedan, Standard			371006	371060
4 Door Sedan, Deluxe			371006	371060
Coupe, Standard			371006	371065
Club, Deluxe			371006	371065

SECTION 5

## Bitchin Super Saver Kit



Now, That's a Cool Deal!



Small Block Kit includes: (1) 371080 Firewall (\$390)

Kit Price \$861

(1) 351014 Front Floorboard (\$320)(1) 371006 Rear Floorboard (\$225)

Big Block Kit includes: (1) 371012 Firewall (\$390)

(1) 351014 Front Floorboard (\$320)

Kit Price \$861

(1) 371006 Rear Floorboard (\$225)



### SORRY, NO MIX 'N MATCH

www.absolutesheetmetal.com





Big Block Kit includes: (1) 371012 Firewall (\$390)

(1) 351014 Front Floorboard (\$320)

37-40 Kit Price \$995 371801

371800

(1) 351050 Rear Floorboard (\$365)

Small Block Kit includes: (1) 371030 Firewall (\$380)

Kit Price \$965

(1) 351073 Front Floorboard (\$300)

(1) 351050 Rear Floorboard (\$365)

**SORRY, NO MIX 'N MATCH** 

#### ACCESSORIES

Our Stone Guard Kits were designed to prevent stones, small gravel, etc from hitting the underside of your fender and destroying the paint on the outside. These kits are made of 18 gauge cold rolled steel and come with 4 guards (each is formed to match the curvature of your car fender). Each kit contains new braces for easy installation.



391003 39 FORD
Deluxe & all 40 Passenger Cars



391010 39 FORD Standard Passenger Car




371022 37-38 FORD Passenger Car



901010 DEEP WHEEL WELLS Universal (Fits 1935 to 1948 Fords)

If you plan on putting wide wheels and tires on your car or pro-streeting it, we have just what you need. Our universal deep wheel well kit (B.P. No. 901010) was designed just for that purpose. These 18 gauge cold rolled all steel wheel tubs are 36" from end to end and a full 14" deep. You can install these beauties in as deep as you like for your particular project.

All our deep wheel well kits have mounting angles.

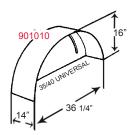

#### 1937-40 DASHBOARDS



Out of the Box



## 

Backside of Designer Dash

The following are Samples of How You Could Custom Finish Your Dash



Picture 1 - Brushed Aluminum w/Hide-a-switch



Picture 2 - Wood Finish




Picture 3 - Painted

YEAR OF VEHICLE	PART#	PRICE	
37-39 FORD, Coupe, Sedan - Steel Face	371032	\$320.00	
37-40 FORD, Conv Woody - Steel Face	371042	\$320.00	
40 FORD, Coupe, Sedan - Steel Face	401015	\$320.00	
NOTICE: Face is 4 3/4" wide - Custom widths - \$35.00			

HIDE-A-SWITCH panels for your new dash. This bolt-on accessory comes in one piece and can be sectioned and fit to steering column drops or consoles. It can be turned at two different angles to give you a 2" or 3" face. We offer two different lengths - 47" and 60" for wider cars.

371038 Hide-A-Switch - 47" - \$55.00 371041 Hide-A-Switch - 60" - \$65.00



#### UNIVERSAL FLOORS



901030 \$295 All Purpose Front Floor Kit



901035 \$250 All Purpose Rear Floor Kit


#### BATTERY BOXES

#### **BATTERY BOXES**

Group 42	901020	\$99.00
Group 71	901006	\$99.00
Optima Box	901040	\$99.00

Mounting a battery in a street rod has always created problems, some major ans some minor. Our battery box kits will solve most of the problems. The universal mounting brackets supplied with these kids allow you to choose the mounting method which best suits your application, including flush floor mounting, side mounting, or halfway through the floor for extra ground clearance. We offer three kits. The positive battery hold down, adequate ventilation and cable protection give added security to your battery installation.

Group 42: 9 3/4 L x 7 W x 7 1/2 H Group 71: 8 1/2 L x 7 1/4 W x 9 1/4 H Optima: 10 1/2 L x 7 1/4 W x 8 1/2 H

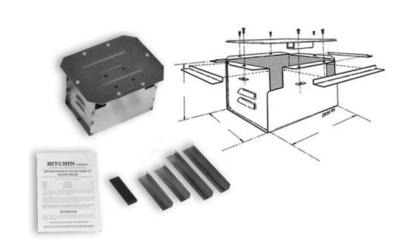

#### UNIVERSAL DEEP WHEEL TUB



901010 \$325 Deep Wheel Tubs Universal

14", 36 ¼", 16"

You Plan on Putting Wide Wheels and Tires on Your Car or Pro-Streeting it, We Have Just What You Need. Our Universal Deep Wheel Tub Kit (No. 901010) Was Designed for Just That. These 18 Gauge Cold Rolled All Steel Wheel Tubs Are 36" From End to End and a Full 14" Deep. You Can Install These Beauties In As Deep As You Like for Your Particular Project. All Our Deep Wheel Tub Kits Have Mounting Angles.

## **1941-48 FORD CARS**



TECHNICAL INFO FOR FIREWALLS	31
FIREWALLKITS	31
FRONT FLOORBOARDS	31
REAR FLOORBOARDS	32
Trunk floorboards	32
DEEP WHEEL WELLS	32
SMOOTHIE RUNNING BOARDS	32
AIR DEFLECTOR KIT	32
CHECK OUT OUR SUPER SAVER KITS!	33
CORE SUPPORT & FENDER APRON KITS	34
DASHBOARDS	34
ROCKER BOXES	34
UNIVERSAL PARTS	35

All Prices are subject to change without notice.

#### 41 - 48 FORD FIREWALLS & TECHNICAL INFORMATION

#### The Set-Back Information Provided on This Page Is For your Information

These references are to help you decide which firewall kit will best fit your particular application. There are many factors which will affect your choice of kits; engine set-back, radiator core thickness, air conditioning or super chargers. You need to determine the length of the engine package you intend to install and then figure out the distance you have from the back of the radiator core to the stock or existing firewall. To do this you will know how much extra room or set-back you will need. The firewall only fits in one place in the body, but your engine can be moved forward or backward as much as needed to obtain proper clearances. If you have any questions, please call our customer service dept. @ (928) 420-6346



421000 41-48 FORD & MERC. FIREWALL Small Block

Designed for passenger cars, this firewall has a 1 1/2" set-back with a 34" wide front opening.




421002 41-48 FORD & MERC. FIREWALL Big Block

Our big block firewall has a 4" set-back for you guys who like to use those really big motors.




421105 41-48 FORD & MERC. FIREWALL EXTENSION - RH 421106 41-48 FORD & MERC. FIREWALL EXTENSION - LH


If you have a convertible, you must purchase these parts to go with the firewall to make your installation complete and neat.

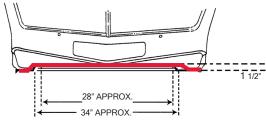

421000 1941-48 FORD & MERCURY FIREWALL (1 1/2" SET-BACK) Small Block



421002 1941-48 FORD & MERCURY FIREWALL (4" SET-BACK) Big Block



**NOTE:** These firewalls are designed for the most popular engine-transmission conversion which is Chevy engine and GMC turbo transmission. Any other engine installation (Ford, Mopar, etc.) may require rework of the bell housing area of the firewall

#### 41 - 48 FORD & MERCURY FRONT FLOORBOARDS



421001 41-48 FORD & MERC. FRONT FLOOR - Small Block

This kit matches up to our small block firewall #421000.



421003 41-48 FORD & MERC. FRONT FLOOR - Big Block

This kit will fit right up to our big block firewall #421002.



421004 41-48 FORD & MERC. FRONT FLOOR - Universal

This kit was designed to fit up to your stock firewall and still give you a redesigned floor that will clear the big automatic transmissions.


#### Order Line: 928-420-1254 Tech Line: 928-420-6346 Fax Line: 928-277-4581

#### 41 - 48 REAR & TRUNK FLOORBOARDS



421034 41-48 FORD & MERC. REAR FLOOR

Match this floorboard up to our front floorboard kit and it makes your floor look very professional



421083 COWL VENT FILLER



421090 41-48 FORD & MERC. REAR SEAT RISER REPAIR KT

This is one of those kits that is not often not needed, but when you do need it, it's nice to have. With this kit, you get the seat riser under the front edge of the seat and the sheet metal under the seat along with complete set of how-to-instructions.




421084 41-48 FORD & MERC. TRUNK REPAIR KT

This kit allows you to replace the very bottom of your trunk floo . Each kit comes with enough angles and the sub-frame cross brace that almost always rusts out to make your installation easy.




901010 DEEP WHEEL WELLS Universal

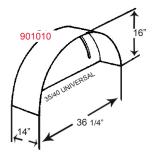

If you plan on putting wide wheels and tires on your car or pro-streeting it, we have just what you need. Our universal deep wheel well kit (B.P. No. 901010) was designed just for that purpose. These 18 gauge cold rolled all steel wheel tubs are 36" from end to end and a full 14" deep. You can install these beauties in as deep as you like for your particular project. All our deep wheel well kits have mounting angles.

Installed

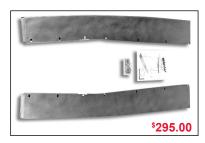

421030 42-48 FORD & MERC. SMOOTHIE RUNNING BOARDS

Some of the original running boards either made of steel or aluminum are either bent or rusted out. We make a 16 gauge steel smoothie running board that we think is better than either of the originals. It's made a little wider to compensate for the removal of the molding. Either bolt them on as they come or weld them in and blend them into the body for a more modern, smoother look. NOTE: This part will fit a 1941 Ford with a small amount of modification and it will be flush like the 1942 to 1948 model



421074 42-48 FORD AIR DEFLECTOR KIT

This 42-48 kit is a redesigned front pan. It replaces your stock pan with the useless crank hole in the middle. We think you will agree that this is a much cleaner looking pan than your old original pan. (Fits Ford only, will not fit Mercurys)

## Bitchin Super Saver Kit




SORRY, NO MIX 'N MATCH

www.absolutesheetmetal.com

#### 42 - 48 CORE SUPPORT & FENDER APRONS



**421049** 42-48 RADIATOR CORE **SUPPORT** 

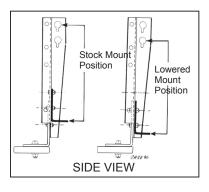

The 1942-48 Ford front sheet metal rides on a factory core support that is 'Y' shaped and has one mounting bolt in the middle. This allows the front sheet metal to rock and flex. As a result, the front sheet metal is often out of alignment. We designed a posi-align core support that is a direct bolt-in. It mounts the sheet metal out on each frame rail and that not only gives you plenty of adjustment where you had none before, but it assures you it will stay in place once aligned. The posi-align core support also allows you to mount your radiator 2 1/3" lower than stock, which in turn lets you use a flex fan instead of an electric fan. The core support kit comes with a front lower air deflector kit. The air deflect or really cleans up the area behind the grill. (Fits Ford only, will not fit Mercurys.)



**421042 FORD SMOOTHIE KIT INNER APRONS** 



421046 FORD LOUVERED KIT **INNER APRONS** 

The 42-48 Ford has some strange shaped inner fender front aprons. We redesigned them to allow more air in and for a better look. Made of 18 gauge steel with a bead rolled into them, they are really a work of art. Our louvered aprons have 64 louvers. When we redesigned them the stock stone shields no longer fit, so we made new ones. They now fit, are larger and look better. We included them in each kit. They bolt up to your stock core support or our posialign core support.

Try'em you'll like'em.

#### 41 - 48 FORD DESIGNER DASHBOARDS



Out of the Box




Sample of Wood Finish

YEAR OF VEHICLE	PART#	PRICE		
41-48 FORD & MERCURY - Steel Face	421078	\$320.00		
NOTICE: Face is 4 3/4" wide - Custom widths - \$35.00				

HIDE-A-SWITCH panels for your new dash. This bolt-on accessory comes in one piece and can be sectioned and fit to steering column drops or consoles. It can be turned at two different angles to give you a 2" or 3" face. We offer two different lengths - 47" and 60" for wider cars.

371038 Hide-A-Switch - 47" - \$55.00 371041 Hide-A-Switch - 60" - \$65.00

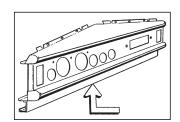

#### 41 - 48 FORD ROCKER BOXES



421022 CENTER ROCKER BOX **Passenger Side** 



**421023 CENTER ROCKER BOX Drivers Side** 

One of the really bad trouble spots on any 1941-48 Ford or Mercury has always been the rocker boxes. This box-like body stiffener runs from the firewall area to the rear wheel house on both sides on the car.

They have a tendency to rust out because the originals are very thin on the inside and they fill with dirt. Bitchin Parts.® does not make just an outer skin, we make a complete rocker box with the nut plates welded into place for the running boards. Since these are very long in the completed stage we decided to offer them in sections. Each side is available in three sections.

You can purchase all or just one part if that is all you need. These boxes are manufactured of 16 gauge cold rolled steel.

If you have any guestions give us a call at (928) 420-6346 and we will be glad to help.

#### **Long Door Cars**

The 1941-48 Ford & Mercury 2 Door Sedans, Sedan Coupes (w/backseats) & the Convertibles are considered "long door cars". This means the length of the front door from the front to the rear is 44" long when measured at the belt line.



421060 REAR ROCKER **BOX** Passenger Side



421061 REAR ROCKER **BOX Drivers Side** 

#### **Short Door Cars**

The 1941-48 Ford & Mercury 4 Door Sedans, Business Coupes (no backseats) & Sedan Deliveries are considered "short door cars". This means the length of the front door from the front to the rear is 35 1/2" long when measured at the belt line.



**Passenger Side** 



**Passenger Side** 



**CNTR. ROCKER BOX Drivers Side** 



421102 REAR ROCKER BOX 421103 REAR ROCKER BOX **Drivers Side** 



**Passenger Side** 



421066 FRNT. ROCKER BOX 421067 FRNT. ROCKER BOX **Drivers Side** 

Front Rocker **Boxes** Fit All Models

Call 1-928-420-1254 To Order Today or visit our web site www.absolutesheetmetal.com

#### UNIVERSAL FLOORS



901030 \$295 All Purpose Front Floor Kit



901035 \$250 All Purpose Rear Floor Kit


#### BATTERY BOXES

#### **BATTERY BOXES**

Group 42	901020	\$99.00
Group 71	901006	\$99.00
Optima Box	901040	\$99.00

Mounting a battery in a street rod has always created problems, some major ans some minor. Our battery box kits will solve most of the problems. The universal mounting brackets supplied with these kids allow you to choose the mounting method which best suits your application, including flush floor mounting, side mounting, or halfway through the floor for extra ground clearance. We offer three kits. The positive battery hold down, adequate ventilation and cable protection give added security to your battery installation.

Group 42: 9 3/4 L x 7 W x 7 1/2 H Group 71: 8 1/2 L x 7 1/4 W x 9 1/4 H Optima: 10 1/2 L x 7 1/4 W x 8 1/2 H

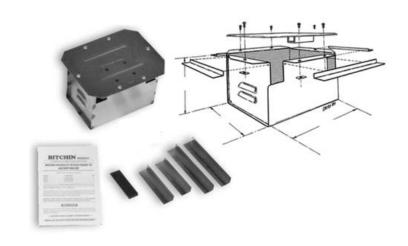

#### UNIVERSAL DEEP WHEEL TUB



901010 \$325 Deep Wheel Tubs Universal

14", 36 ¼", 16"

You Plan on Putting Wide Wheels and Tires on Your Car or Pro-Streeting it, We Have Just What You Need. Our Universal Deep Wheel Tub Kit (No. 901010) Was Designed for Just That. These 18 Gauge Cold Rolled All Steel Wheel Tubs Are 36" From End to End and a Full 14" Deep. You Can Install These Beauties In As Deep As You Like for Your Particular Project. All Our Deep Wheel Tub Kits Have Mounting Angles.

#### **COWL VENT FILLERS**

#### CARS

#### **CAR YEAR / TYPE** PART# **PRICE** 32' Ford Car 321097 \$22.00 33'-34' Ford Car \$22.00 331084 35'-36' Ford Car 351082 \$22.00 37'-40' Ford Car 371037 \$22.00 41'-48' Ford & Mercury Car 421083 \$22.00 37'-39' Chevy Car 737200 \$22.00 40' Chevy Car 740111 \$22.00

#### TRUCKS

TRUCK YEAR / TYPE	PART#	PRICE
32'-34' Ford Truck	321097	\$22.00
35'-36' Ford Truck	331084	\$22.00
37'-47' Ford Truck	371037	\$22.00
48'-52' Ford Truck	481037	\$22.00
47'-53' Chevy Truck (Top)	751023	\$22.00
47'-50' Chevy Truck (Side)	751024	\$22.00
54'-55' Chevy Truck (Top)	751060	\$22.00



321097 32' Ford Car



331084 33'-34' Ford Car & 35'-36' Ford Truck



351082 35'-36' Ford Car



371037 37'-40' Ford Car & 37'-47' Ford Truck



421083 41'-48' Ford & Mercury Car




481037 48'-52' Ford Truck



737200 37'-39' Chevy Car




740111 40' Chevy Car



751023 47'-53' Chevy Truck (Top)



751024 47'-50' Chevy Truck (Side)



751060 54'-55' Chevy Truck (Top)



Our Cowl Vent Fillers are made from 18 Gage cold rolled steel and are a little larger than the Stock Cowl so they can be trimmed for a perfect fit. The edges are beveled so the weld area is below surface making it easier for a flush fit. Swap meet the original, and pocket the difference.

## Bitchin T-Shirts Now Available!







ONLY \$15.95!

Sizes: Medium to 3XL Black or White T-Shirt

Item number: BT(size) & WT(size) ex: WT2XL = White Tshirt Size 2XL



### **ORDER SHEET**

ABSOLUTE SHEET METAL, LLC, 2420 W. Road 2 S. Chino Valley, AZ 86323

NAME			DAY PHONE	DATE	
ADDRESS					
CITY/STATE					
ZIP					
YEAR OF CAR			MAKE	MODEL	
OTHER INFO					
QUANTITY	PART NUMBER	DESCRIPTION		PRICE EACH	PRICE TOTAL
				Subtotal	
Call for shipping a	nmount or add 20%, we wi	ll refund of overpayme	ent	Shipping	
current suppling unitoutit of utua 20/8/ we will return of overpuy			AZ Res Add 6.35%		
Email:				Total	
	Persor		il or Fax Order For Clear Your Bank -	rm. Allow 3 Extra Weeks	
Money Order/			Card Tyr	ne	
Money Order/			Card Number		
Personal			Card Number		
Check Amount		Expiration Date			



### **ORDER SHEET**

ABSOLUTE SHEET METAL, LLC, 2420 W. Road 2 S. Chino Valley, AZ 86323

NAME			DAY PHONE	DATE	
ADDRESS					
CITY/STATE					
ZIP					
YEAR OF CAR			MAKE	MODEL	
OTHER INFO					
QUANTITY	PART NUMBER	DESCRIPTION		PRICE EACH	PRICE TOTAL
				Subtotal	
Call for shipping amount or add 20%, we will refund of overpaym		ll refund of overpayme	ent	Shipping	
				AZ Res Add 6.35%	
Email:				Total	
	Persor		il or Fax Order For Clear Your Bank -	rm. Allow 3 Extra Weeks	
Money Order/			Card Tyn	ne	
Money Order/			Card Number		
Personal			Card Number		
Check Amount		Expiration Date			