


BITCHIN' PARTS

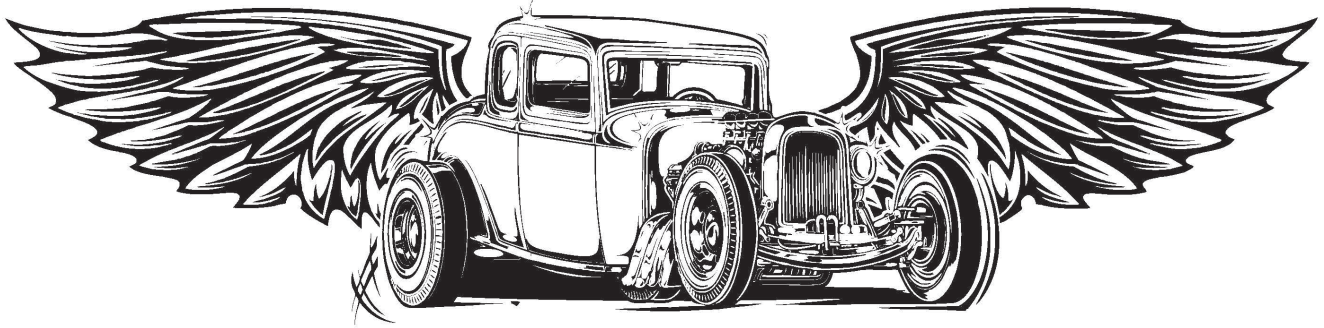

BY **ABSOLUTE SHEET METAL** LLC

2018 Catalog

Ford Trucks

1928-1952



When you want it **BITCHIN'...**
Call 1-928-420-1254 to Order!
www.absolutesheetmetal.com

Terms & Conditions of Sale

Absolute Warranties All Products Manufactured to Be Free From Defects In Both Material and /or Workmanship for a Period of Thirty (30) Days From Date of Sale. If for Any Reason The Buyer is Not Satisfied With Any Product Manufactured & Sold By Absolute Just Return The Item(S) Within Thirty (30) Days From Date of Sale for Refund or Exchange to The Place or Origin. If Such Item or Products is Not a Manufacturing Defect, it is Subject to a 20% Restocking Charge. Proof of Purchase is Required From Absolute Sheet Metal. See No. 8 Below.

Notice to Buyers Ordering: You May Order By Mail, Telephone, Fax Machine, E-Mail. All Absolute Kits Are Shipped Ups. We Accept MasterCard, Visa or American Express. Please Include All Pertinent Information When Ordering Parts. Give Us The Model & Year of Your Vehicle & Use The Part Numbers When Possible. List Your Phone Number & Area Code.

2. Prices: All Prices Are F.O.B. Chino Valley, AZ., USA & Stated In U.S. Dollars. Prices Are Effective on The Date Shown & Subject to Change Without Prior Notice or Approval. In The Event of a Substantial Increase In Price, You Will Be Notified Prior to Shipment of Your Order.

3. Packaging: The Goods Will Be Packed In Accordance With Seller S Then Prevailing Packaging. Buyer Shall Pay All Costs for Special Packaging Requested By The Buyer.

4. Personal Check: Prepayment By Check is Also Welcome, However, Some Delay May Occur Due to Bank Clearance Time. Also Note That You Should Call Our Shipping Department to Find Out What The Shipping Costs Will Be Along With Your Product Order.

5. Shipping: All Orders Are Shipped Via UPS Oversize or Overweight Items Will Be Shipped Regular Ground & Extra Shipping Charges Will Be Added to The Invoice.

6. Shortages: Examine Your Order Carefully. Call Immediately Upon Finding Any Shortages. No Allowances Will Be Made for Shortages Unless We Are Notified Within 5 Days With The Invoice Number & Its Date.

7. Damaged Goods or Risk of Loss: Shall Be on The Buyer From The Time Seller Delivers The Goods to a Carrier for Shipment to Buyer, Without Reference to The Type of Shipment. Seller Shall Not Be Liable for Any Loss or Damage Sustained In Transit. Buyer Must Assert Claims for Damages In Transit Against The Carrier.

8. Returns: You May Return Any Kit or Parts Ordered, But Not Parts of Kits, for Up to 30 Days After The Original Ship Date. All Returns, However, Must Be Made Within The 30 Days From Receipt. This Includes Flawed or Incorrect Merchandise. No Exceptions.

Any Merchandise to Be Returned to Absolute Must Have a Return Authorization Number Issued By Our Shipping Dept., Which Can Be Reached During Regular Working Hours At (928) 420-1254. The Return Policy is As Follows:

1. You Must Be Issued a *Return Authorization Number*.

2. You Must Return Merchandise to Us Within 30 Days of Receiving a Return Number. The Number Must Be Visible on The Outside of The Returning Container.

3. All Returns Must Be "Pre-Paid Shipping" & Fully Insured, As We Cannot Accept Collect Shipments.

4. In Cases Where a Return is Due to Our Error, We Will Refund "Pre-Paid" Freight Charges. After 30 Days All Sales Are Final.

5. Merchandise Shipped In Error, or Has Flaws Due to Craftsmanship or Defects In Materials, Will Be Immediately Exchanged or Refunded At No Charge. Merchandise Returned for Any Other Reason Will Be Charged a 20% Restocking Fee 1-30 Days From Original Ship Date. Product Must Have Been Purchased Directly From Absolute & Accompanied With a Copy of The Purchase Invoice.

9. Refused Shipments: Any Customer Who Refuses a Delivery of an Order (Damaged Shipment Excluded) Will Be Required to Pay The Additional Return Freight Charges. These Charges Must Be Paid In Full Before Any Future Orders Will Be Shipped.

10. Back Orders: We Maintain a Back Order Program. If Your Full Order Cannot Be Shipped In Total, We Will Place The Balance of Your Order Into Back Order Mode.

11. Tax: In Addition to Quoted Purchase Price, Buyer Shall Pay Any Tax Which Seller May Be Required to Pay or Collect Under Any Existing or "Future" Law, Upon or With Respect to The Sale or Purchase of Absolute Merchandise.

12. Manufacturer S Right Retained: Absolute Reserves The Right to Make Changes In Design or to Make Additions to or to Improve Upon Any Product At Any Time Without Incurring Any Obligation Whatsoever to Install The Same or Improve Upon Products Previously Manufactured.


13. Notice to All Buyers; Absolute Cannot Control The Application, Installation, Modification or Utilization of Our Products By Our Customers. Accordingly, No Express Warranties Are Given & The Company Makes No Warranty of Merchantability. The Products Are Sold on an "As is" Basis.

14. Specifications: The Product Shall Meet Seller S Standard Specifications Unless Buyer, In Placing The Order, Makes a Written Request for Reasonable Variations & Seller Expressly Agrees, In Writing, to Make Such Variations.

15. Testing: Buyer, In Addition to The Purchase Price, Shall Pay All Cost Incurred In Connection With Any Testing to Determine Whether The Goods Meet The Particular Specification of The Buyer. Buyer Must Specify Such Special Testing Requirements At Time of Order.

16. Patents: Buyer Shall, In Respect to Goods Packaged By Seller In Accordance With Designs, Processes, Formulas or Supplies, Determined, or Requested By Buyer, Defend, Indemnify, & Hold Harmless, Seller, it's Successors & Assigns From & Against Any Claim, Loss, Damage or Expense, Including Attorney S Fees, Arising Out of Any Infringement or Claim of Infringement of Any Letters Patent, Trade Name, Trademark, Copyright, or Trade Secrets By Reason of The Use of Such Designs, Processes, or Formulas. Seller Shall Promptly Notify Buyer of Such Claim or Infringement No Returns Will Be Accepted After 30 Days From Shipping.

1928-31 FORD TRUCKS

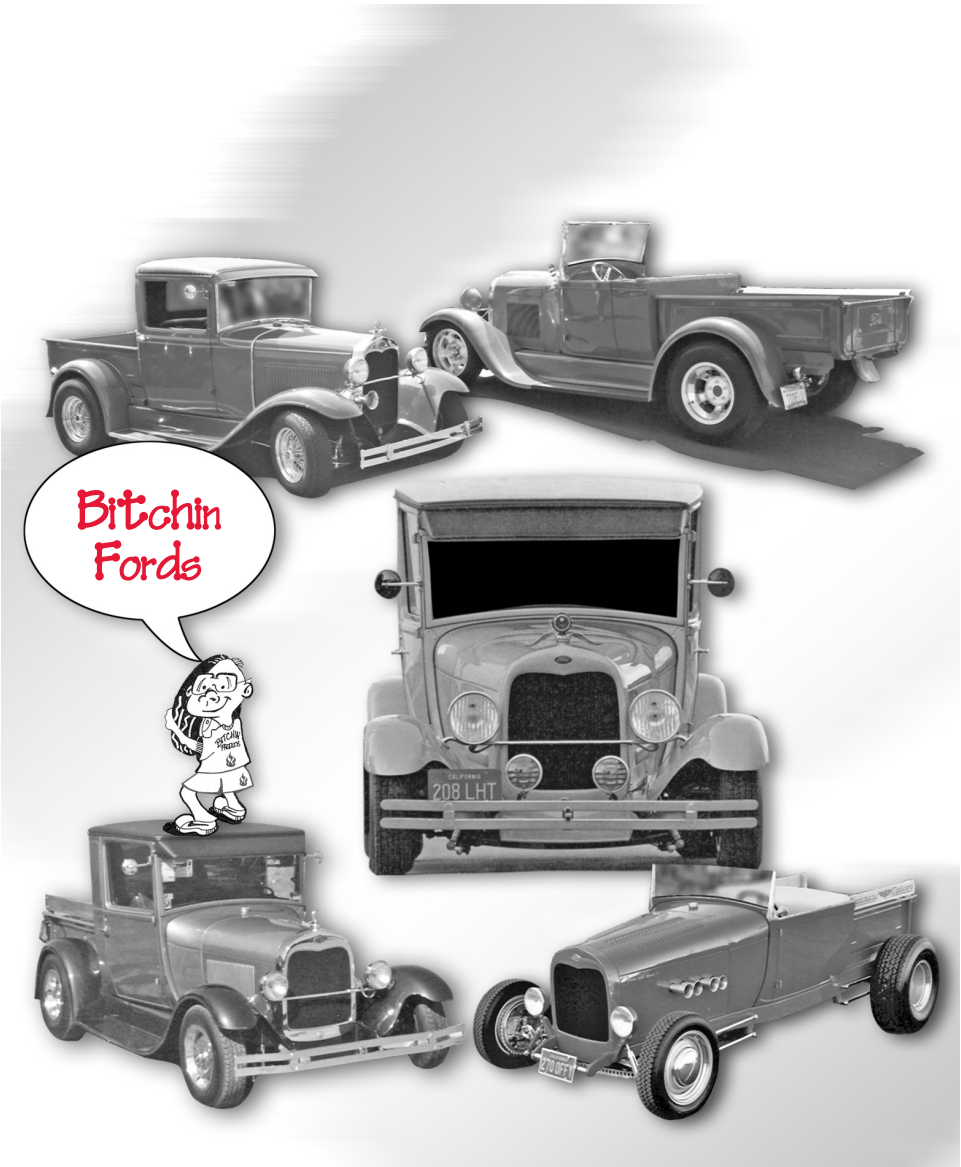

TECHNICAL INFO FOR FIREWALLS	2
28-29 FIREWALLS.....	2
30-31 FIREWALLS	2
FLOORBOARDS	3
SMOOTHIE RUNNING BOARDS.....	5
CHECK OUT OUR SUPER SAVER KITS!	4
DEEP WHEEL WELL KITS	5
UNIVERSAL PARTS.....	5

All Prices are subject to change without notice.

28 - 31 FORD FIREWALLS & TECH INFO

The Set-Back Information Provided on This Page Is For your Information

These references are to help you decide which firewall kit will best fit your particular application. There are many factors which will affect your choice of kits; engine set-back, radiator core thickness, air conditioning or superchargers. You need to determine the length of the engine package you intend to install and then figure out the distance you have from the back of the radiator core to the stock or existing firewall. To do this you will know how much extra room or set-back you will need. The firewall only fits in one place in the body, but your engine can be moved forward or backward as much as needed to obtain proper clearances. If you have any questions, please call our Customer Service Dept. @ (928) 420-6346.



281000 28-29 FORD FIREWALL
4" Set-Back

This is a complete Kit consisting of the upper and lower sections. The lip on the upper section slides over the lip on the lower section, making a very smooth edge.




301000 30-31 FORD FIREWALL
4 1/2" Set-Back

Need more engine room? This Firewall has a 4 1/2" set-back from the front edge of the cowl. Remember, the stock Firewall protrudes 2", therefore the total set-back is 6 1/2".




301005 30-31 FORD FIREWALL
2 1/2" Set-Back


This Firewall has an approximate 2 1/2" set-back from the cowl edge. Add 2 inches for the stock Firewall protrusion and you have a 4 1/2" set-back.

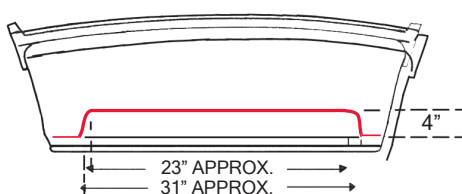

281000 1928-29 FORD FIREWALL
(4" Set-Back)

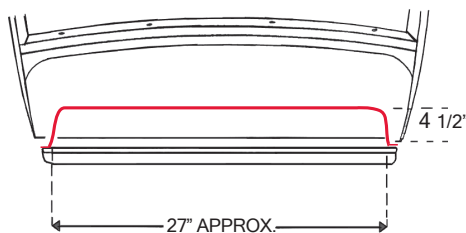


301000 1930-31 FORD FIREWALL
(4 1/2" Set-Back)

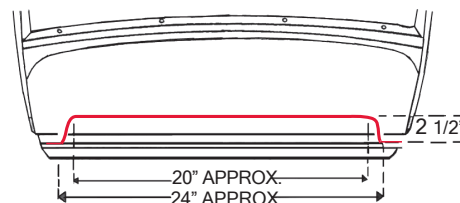


301005 1930-31 FORD FIREWALL
(2 1/2" Set-Back)

ALL SET-BACK MEASUREMENTS ARE TAKEN FROM THE COWL EDGE WITH THE STOCK FIREWALL REMOVED. KEEP IN MIND THE FACE OF THE STOCK FIREWALL PROTRUDES ABOUT 2" IN FRONT OF THE COWL EDGE.

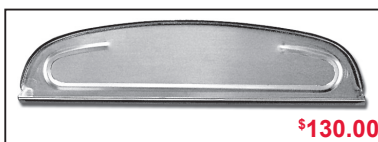

281003 28-29 FIREWALL UPPER
SECTION



The upper section of the 28-29 Firewall will match up to a stock lower section 281002, to the right.

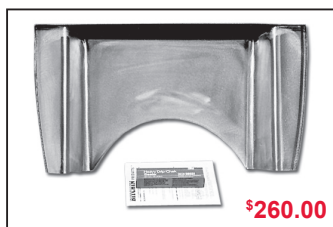

281002 28-29 FIREWALL LOWER
SECTION

The lower section may be used with the stock upper section if you only want to change the bottom.


Measure the set-back from the face of the firewall back as illustrated.

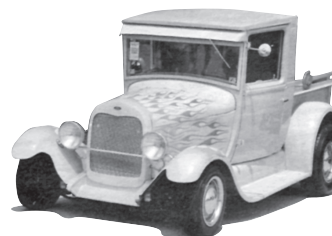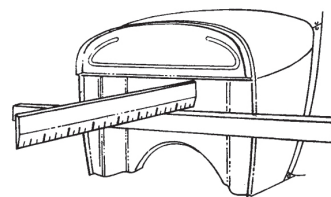

NOTE: These firewalls are designed for the most popular engine-transmission conversion which is Chevy engine and GMC turbo transmission. Any other engine installation (Ford, Mopar, etc.) may require rework of the bell housing area of the firewall.

28 - 31 FORD FLOOR KITS

Front Floor Kit

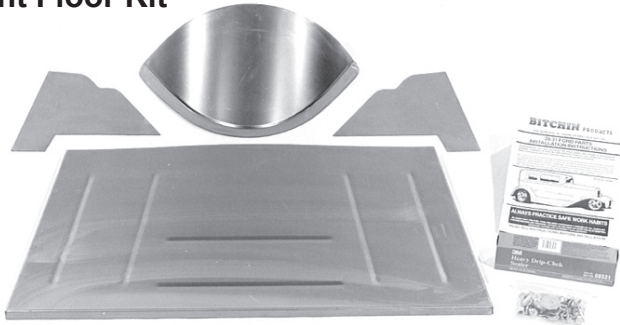


281005

28-31

\$165⁰⁰

This Kit matches our Firewalls and clears automatic transmissions. It fits all models.

Rear Floor Pan

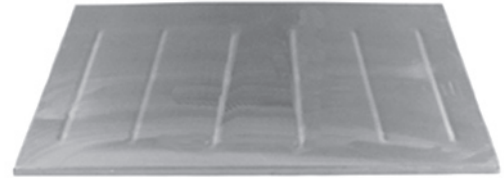

281056

28-29 Closed Cab Pick Up

The rear floor will finish out the 28-29 floor.

\$125⁰⁰

Tranny Tunnel



281007

28-31

\$65⁰⁰

SMOOTHIE RUNNING BOARDS

Smoothie Running Boards




281055

28-29

\$275⁰⁰

Smoothie Running Boards

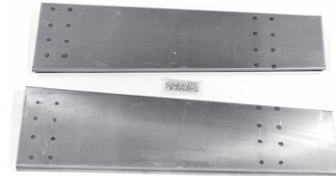

301022

30-31

\$285⁰⁰

BITCHIN Parts manufactures one of the nicest Smoothie, all steel, Running Boards on the market today. They are made out of 16 Gauge cold rolled steel and are a quality piece of work. The fit and detail is superb and if your project demands the best, these running boards will fill the bill. We manufacture all of our parts in our Prescott area facility.




www.absolutesheetmetal.com



Bitchin Super Saver Kit

Ford Truck Firewall and Floorboard

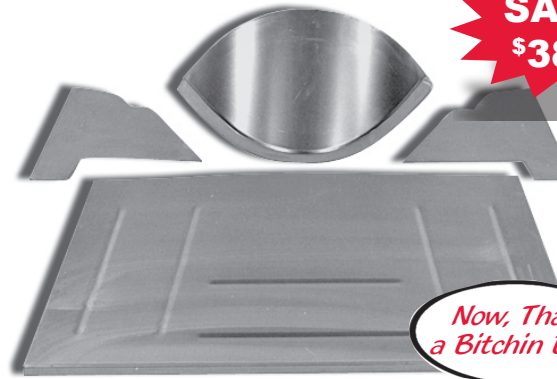

**SAVE
\$38⁰⁰**



*Now, That's
a Bitchin Deal!*



Kit includes:

- (1) 281000 Firewall (\$320)
- (1) 281005 Floorboard (\$165)

Kit Price \$447


281900

28-29

SORRY, NO MIX 'N MATCH

www.absolutesheetmetal.com

Ford Truck Firewall and Floorboard

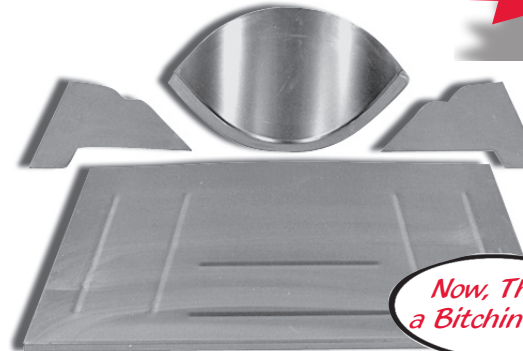

**SAVE
\$40⁰⁰**



*Now, That's
a Bitchin Deal!*



Big Block Kit includes:

- (1) 301000 Firewall (\$350)
- (1) 281005 Floorboard (\$165)

30-31

Small Block Kit includes:

- (1) 301005 Firewall (\$320)
- (1) 281005 Floorboard (\$165)


301900

Kit Price \$ 475

Kit Price \$445

SORRY, NO MIX 'N MATCH

UNIVERSAL FLOORS

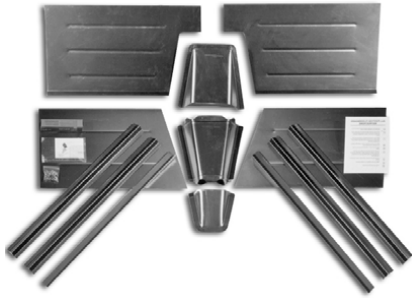

901030 \$295 All Purpose Front Floor Kit



901035 \$250 All Purpose Rear Floor Kit


BATTERY BOXES

BATTERY BOXES

Group 42	901020	\$99.00
Group 71	901006	\$99.00
Optima Box	901040	\$99.00

Mounting a battery in a street rod has always created problems, some major and some minor. Our battery box kits will solve most of the problems. The universal mounting brackets supplied with these kits allow you to choose the mounting method which best suits your application, including flush floor mounting, side mounting, or halfway through the floor for extra ground clearance. We offer three kits. The positive battery hold down, adequate ventilation and cable protection give added security to your battery installation.


Group 42: 9 3/4 L x 7 W x 7 1/2 H
 Group 71: 8 1/2 L x 7 1/4 W x 9 1/4 H
 Optima: 10 1/2 L x 7 1/4 W x 8 1/2 H

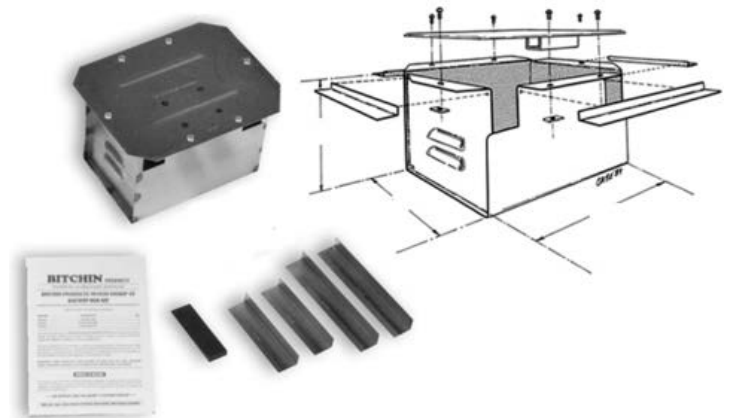

UNIVERSAL DEEP WHEEL TUB




901010 \$325 Deep Wheel Tubs Universal

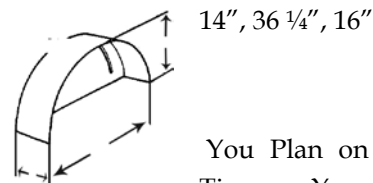

You Plan on Putting Wide Wheels and Tires on Your Car or Pro-Streeting it, We Have Just What You Need. Our Universal Deep Wheel Tub Kit (No. 901010) Was Designed for Just That. These 18 Gauge Cold Rolled All Steel Wheel Tubs Are 36" From End to End and a Full 14" Deep. You Can Install These Beauties In As Deep As You Like for Your Particular Project. All Our Deep Wheel Tub Kits Have Mounting Angles.

32-34 FORD TRUCKS

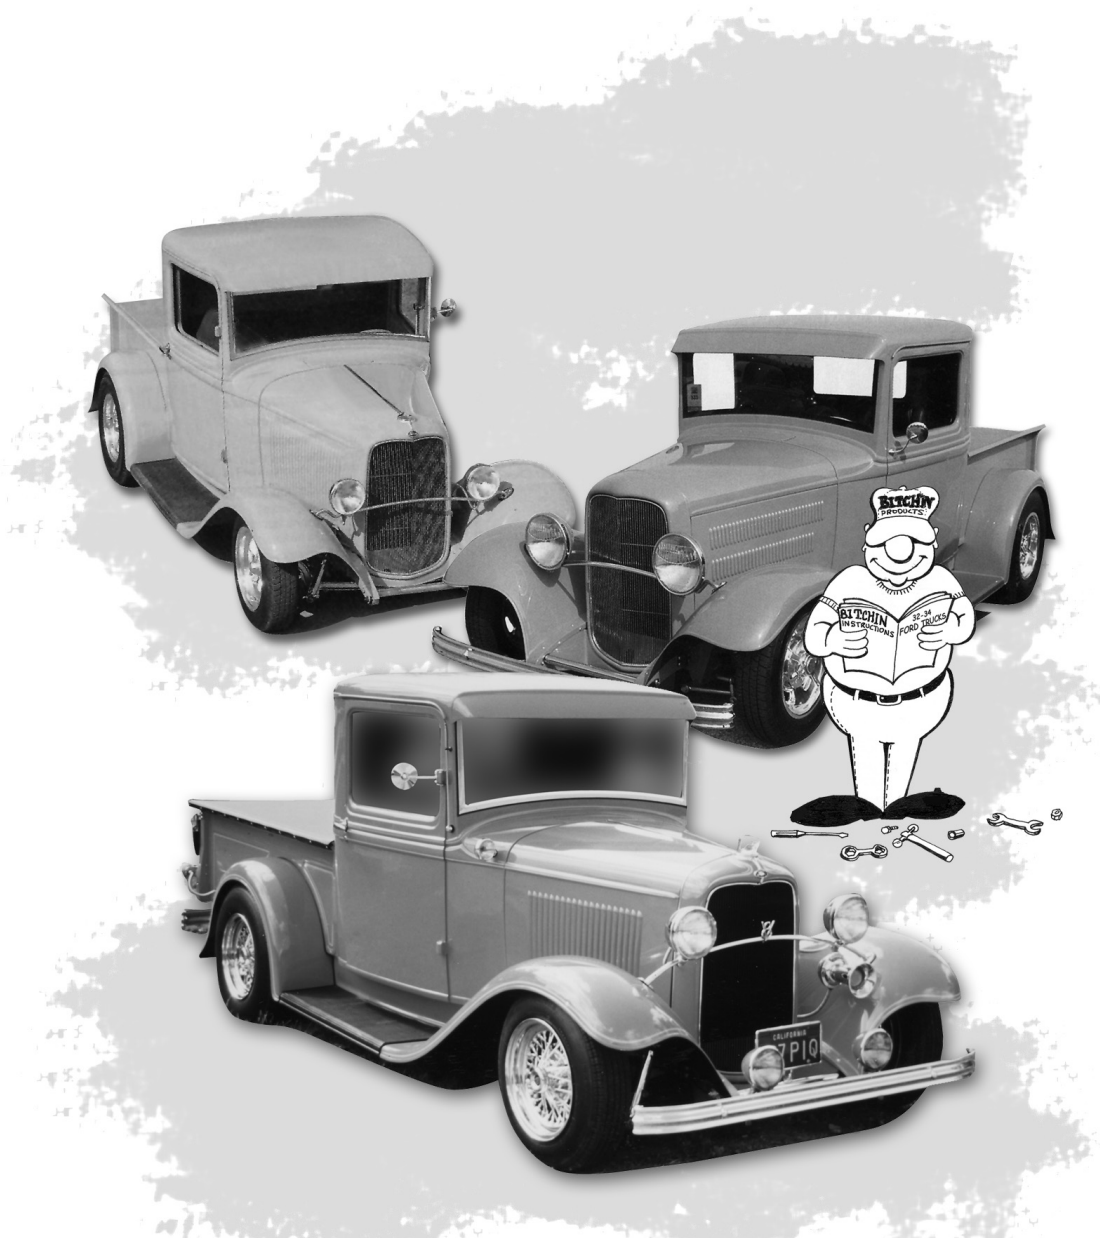

TECHNICAL INFO FOR FIREWALLS	7
32 FIREWALLS.....	7
33-34 FIREWALLS	7
FLOORBOARDS	8
CHECK OUT OUR SUPER SAVER KITS!.....	9
DEEP WHEEL WELL KITS	10
UNIVERSAL PARTS.....	10

All Prices are subject to change without notice.

32-34 FORD FIREWALLS & TECH INFO


The Set-Back Information Provided on This Page Is For your Information

These references are to help you decide which firewall kit will best fit your particular application. There are many factors which will affect your choice of kits; engine set-back, radiator core thickness, air conditioning or super chargers. You need to determine the length of the engine package you intend to install and then figure out the distance you have from the back of the radiator core to the stock or existing firewall. To do this you will know how much extra room or set-back you will need. The firewall only fits in one place in the body, but your engine can be moved forward or backward as much as needed to obtain proper clearances. If you have any questions, please call our customer service dept. @ (928) 420-6346.



321040 32 FIREWALL KIT - Steel

The 321040 has a 2 3/4" set-back from the front edge of the stock cowl. This configuration will accommodate most small block modern engines.

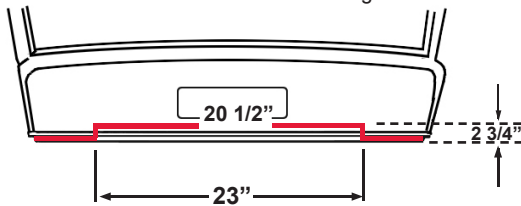


**1932 Ford Truck Firewall
2 3/4" Set-back
No 321040 (Small Block)**



**321050 32 FIREWALL KIT
Hemi**

The 321050 Firewall was developed in 2006 after we got numerous requests for something for Hemis. We went to a 29 1/4" wide, 5" deep firewall that's about as big as you can bolt back into a '32.

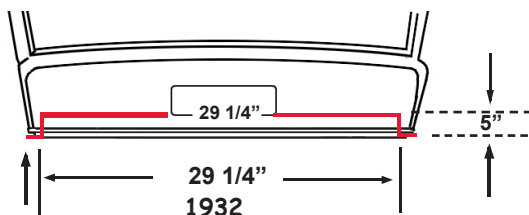


**1932 Ford Truck Firewall - 5" Set-back
No 321050 Hemi**

Bitchin Parts Firewalls are handmade from 16 Gauge cold rolled steel. They are laser cut to the exact size and shape. No shaky, hand held plasma cut parts. The edges are machine formed, not a welded on strip. The Firewalls are a direct bolt in, the same as the originals. All kits come with cast aluminum mounting brackets. Step by Step instructions are provided.



321042 32 FIREWALL KIT - Steel

The 321042 Firewall is made for those of you that need a little more room. The 28" wide, 5" deep set-back will give you the extra room.

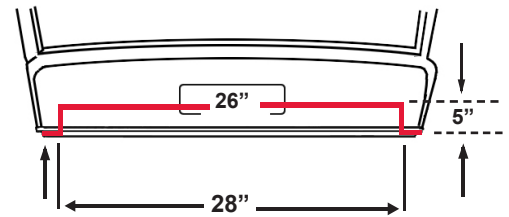


**1932 Ford Truck Firewall - 5" Set-back
No 321042 (Big Block)**

**Genuine Bitchin
Firewalls**



**331000 33-34 FIREWALL KIT
Steel**


The 331000 Firewall actually sits 3/4" behind the cowl edge. Unlike the stock one that protrudes forward like a Model A. By making a flat firewall, you now have enough room for late Model V-8's.

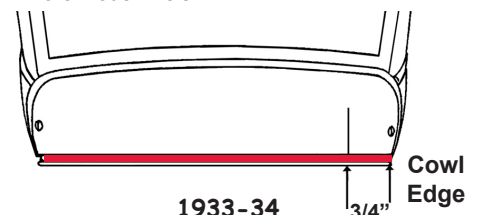

**1933-34 Ford Truck Firewall - No Set-back - Flat
No 331000**

1932- 1934 FLOOR KITS

Floor Kit

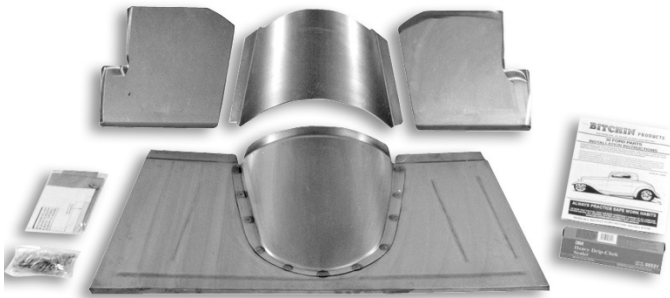


321033 – 32 – Matches Stock F.W.

\$295⁰⁰

This Floor Kit matches up to the 321040 Small Block Firewall. Pick-Up and Passenger car floors are not interchangeable.


Floor Kit

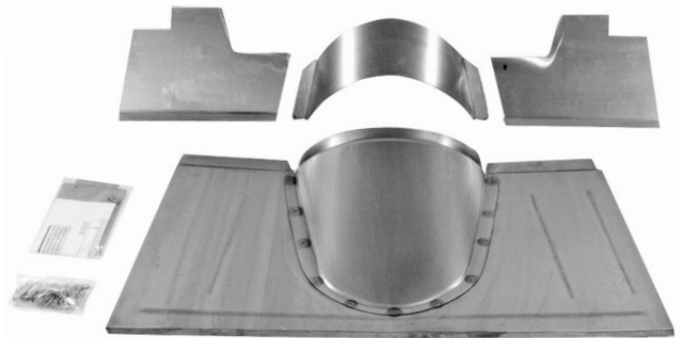

321041 – 32 – Matches up to the 321040 firewall.

\$290⁰⁰

Floor Kit

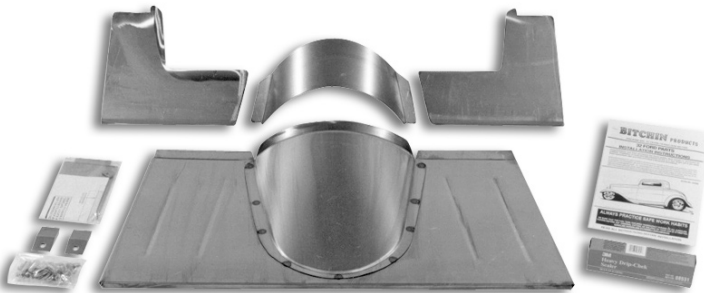

321043 – 32 – Matches - 321042 F.W.

\$290⁰⁰

This Floor Kit matches up to the 321042 Big Block Firewall. Pick-Up and Passenger Car floors are not interchangeable.

Floor Kit




321103 – 32 – Matches 321050 F.W.

\$290⁰⁰

This Floor Kit matches up to the 321050 "Hemi" Firewall. Pick-Up and Passenger Car floors are not interchangeable.

Floor Kit

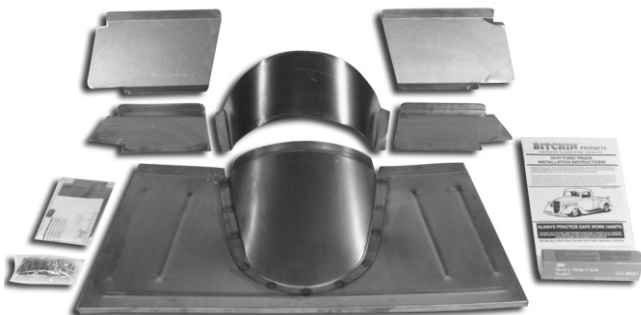

331002 – 33/34 – Matches - 331000 F.W.

\$300⁰⁰


Bitchin Super Saver Kit

Ford Truck Steel Firewall and Floorboard



Small Block Kit includes:
(1) 321040 Firewall (\$390)
(1) 321041 Floorboard (\$290)

Kit Price \$626

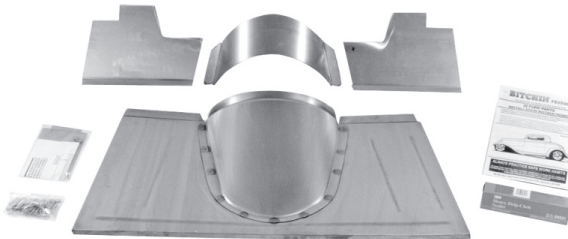

Kit includes:
(1) 321042 Firewall (\$410)
(1) 321043 Floorboard (\$290)

Kit Price \$646

**SAVE
\$54⁰⁰**

*Now, That's
a Bitchin Deal!!*



32

321900


SORRY, NO MIX 'N MATCH

Ford Truck Firewall and Floorboard



331900

33-34

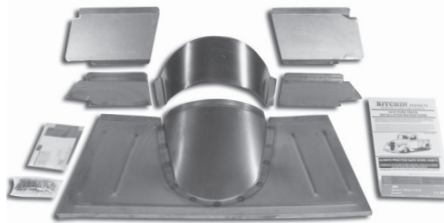

Kit includes:
(1) 331000 Firewall (\$370)
(1) 331002 Floorboard (\$300)

Kit Price \$615

**SAVE
\$55⁰⁰**


*Now, That's
a Bitchin Deal!!*



NOTICE:

A characteristic of the 1932 Ford Pickup is that the Passenger Car sheet metal and parts from the cowl forward are interchangeable. A hot rod truck looks much nicer with the passenger car parts and that is why the front passenger car parts are included in this truck book.

UNIVERSAL FLOORS

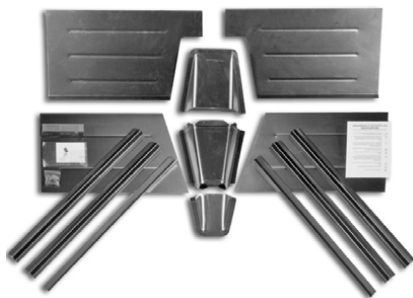

901030 \$295 All Purpose Front Floor Kit



901035 \$250 All Purpose Rear Floor Kit


BATTERY BOXES

BATTERY BOXES

Group 42	901020	\$99.00
Group 71	901006	\$99.00
Optima Box	901040	\$99.00

Mounting a battery in a street rod has always created problems, some major and some minor. Our battery box kits will solve most of the problems. The universal mounting brackets supplied with these kits allow you to choose the mounting method which best suits your application, including flush floor mounting, side mounting, or halfway through the floor for extra ground clearance. We offer three kits. The positive battery hold down, adequate ventilation and cable protection give added security to your battery installation.


Group 42: 9 3/4 L x 7 W x 7 1/2 H
Group 71: 8 1/2 L x 7 1/4 W x 9 1/4 H
Optima: 10 1/2 L x 7 1/4 W x 8 1/2 H

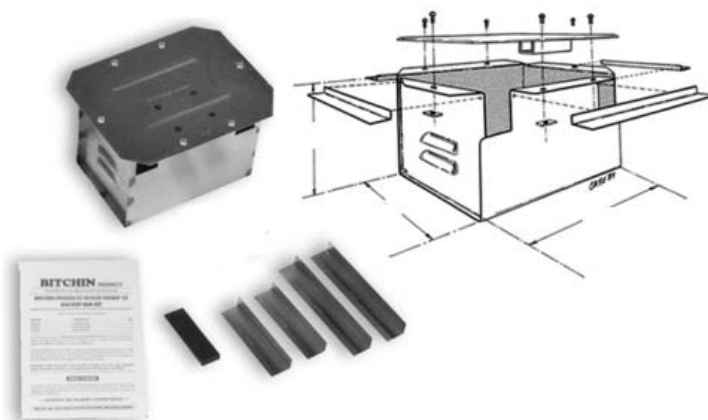

UNIVERSAL DEEP WHEEL TUB




901010 \$325 Deep Wheel Tubs Universal

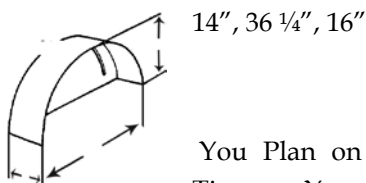

You Plan on Putting Wide Wheels and Tires on Your Car or Pro-Streeting it, We Have Just What You Need. Our Universal Deep Wheel Tub Kit (No. 901010) Was Designed for Just That. These 18 Gauge Cold Rolled All Steel Wheel Tubs Are 36" From End to End and a Full 14" Deep. You Can Install These Beauties In As Deep As You Like for Your Particular Project. All Our Deep Wheel Tub Kits Have Mounting Angles.

1935-36 FORD TRUCKS

When you want it Bitchin

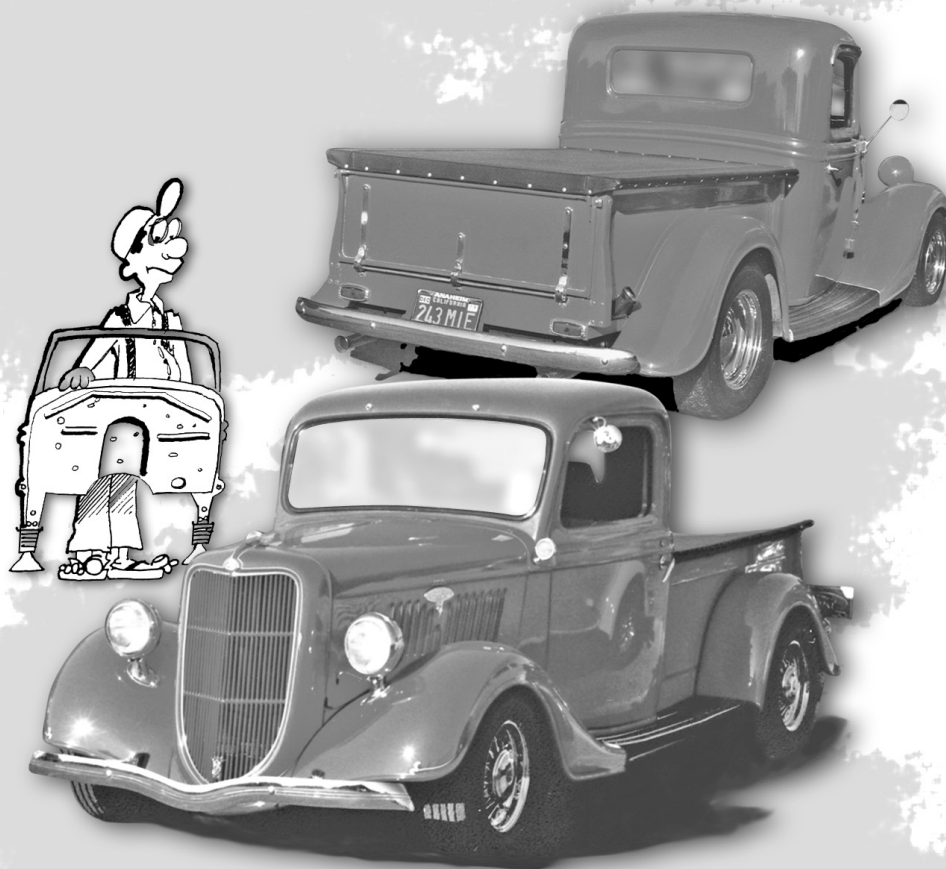


TECHNICAL INFO FOR FIREWALLS	12
35-36 FIREWALLS.....	12
35-39 FIREWALLS	12
CHECK OUT OUR SUPER SAVER KITS!	12
DEEP WHEEL WELL KITS	13
UNIVERSAL PARTS.....	13

All Prices are subject to change without notice.

35-36 FORD FIREWALLS & TECH INFO

The Set-Back Information Provided on This Page Is For your Information

These references are to help you decide which firewall kit will best fit your particular application. There are many factors which will affect your choice of kits; engine set-back, radiator core thickness, air conditioning or superchargers. You need to determine the length of the engine package you intend to install and then figure out the distance you have from the back of the radiator core to the stock or existing firewall. To do this you will know how much extra room or set-back you will need. The firewall only fits in one place in the body, but your engine can be moved forward or backward as much as needed to obtain proper clearances. If you have any questions, please call our customer service dept. @ (928) 420-6346.

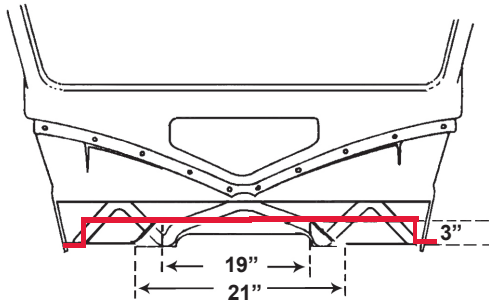

1935-36 Ford Truck
Firewall
3" Set-back
No 351000



351000 35-36 FIREWALL KIT

This firewall is designed to fit the Ford Pickup and Panel trucks.

\$380.00



351002 35-39 Front Floor Kit

This floor fits Ford Pick-ups and Panel trucks and can be used with the 351000 & 371000 firewalls.

\$310.00

ALL SET-BACK MEASUREMENTS ARE TAKEN FROM THE COWL EDGE WITH THE STOCK FIREWALL REMOVED. KEEP IN MIND THE FACE OF THE STOCK FIREWALL PROTRUDES ABOUT 2" IN FRONT OF THE COWL EDGE.

NOTE: These firewalls are designed for the most popular engine-transmission conversion which is Chevy engine and GMC turbo transmission. Any other engine installation (Ford, Mopar, etc.) may require rework of the bell housing area of the firewall.

Bitchin Super Saver Kit

Ford Truck Firewall and Floorboard



351900

35-36



**SAVE
\$55.00**

Kit includes:

- (1) 351000 Firewall (\$380)
- (1) 351002 Floorboard (\$310)


Kit Price \$635

*Now, That's
a Bitchin Deal!*



SORRY, NO MIX 'N MATCH
www.absolutesheetmetal.com

UNIVERSAL FLOORS

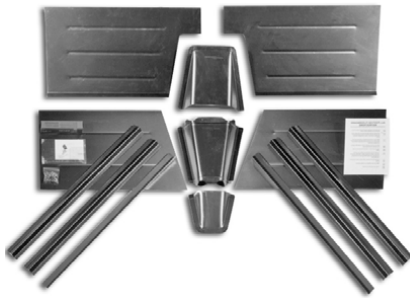

901030 \$295 All Purpose Front Floor Kit



901035 \$250 All Purpose Rear Floor Kit


BATTERY BOXES

BATTERY BOXES

Group 42	901020	\$99.00
Group 71	901006	\$99.00
Optima Box	901040	\$99.00

Mounting a battery in a street rod has always created problems, some major and some minor. Our battery box kits will solve most of the problems. The universal mounting brackets supplied with these kits allow you to choose the mounting method which best suits your application, including flush floor mounting, side mounting, or halfway through the floor for extra ground clearance. We offer three kits. The positive battery hold down, adequate ventilation and cable protection give added security to your battery installation.


Group 42: 9 3/4 L x 7 W x 7 1/2 H
 Group 71: 8 1/2 L x 7 1/4 W x 9 1/4 H
 Optima: 10 1/2 L x 7 1/4 W x 8 1/2 H

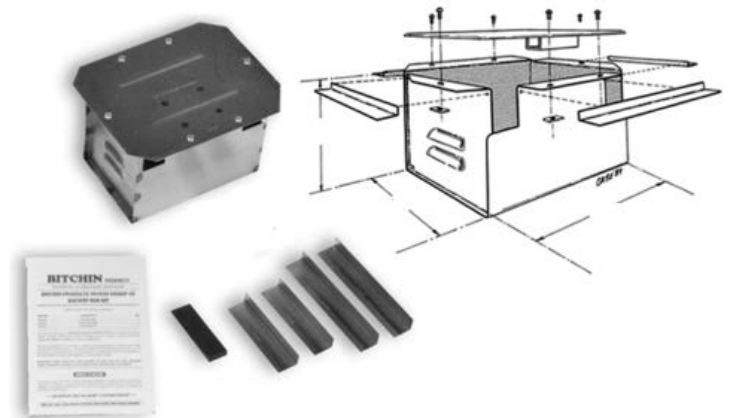

UNIVERSAL DEEP WHEEL TUB




901010 \$325 Deep Wheel Tubs Universal

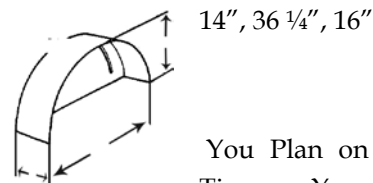

You Plan on Putting Wide Wheels and Tires on Your Car or Pro-Streeting it, We Have Just What You Need. Our Universal Deep Wheel Tub Kit (No. 901010) Was Designed for Just That. These 18 Gauge Cold Rolled All Steel Wheel Tubs Are 36" From End to End and a Full 14" Deep. You Can Install These Beauties In As Deep As You Like for Your Particular Project. All Our Deep Wheel Tub Kits Have Mounting Angles.

1937-39 FORD TRUCKS

When you want it Bitchin

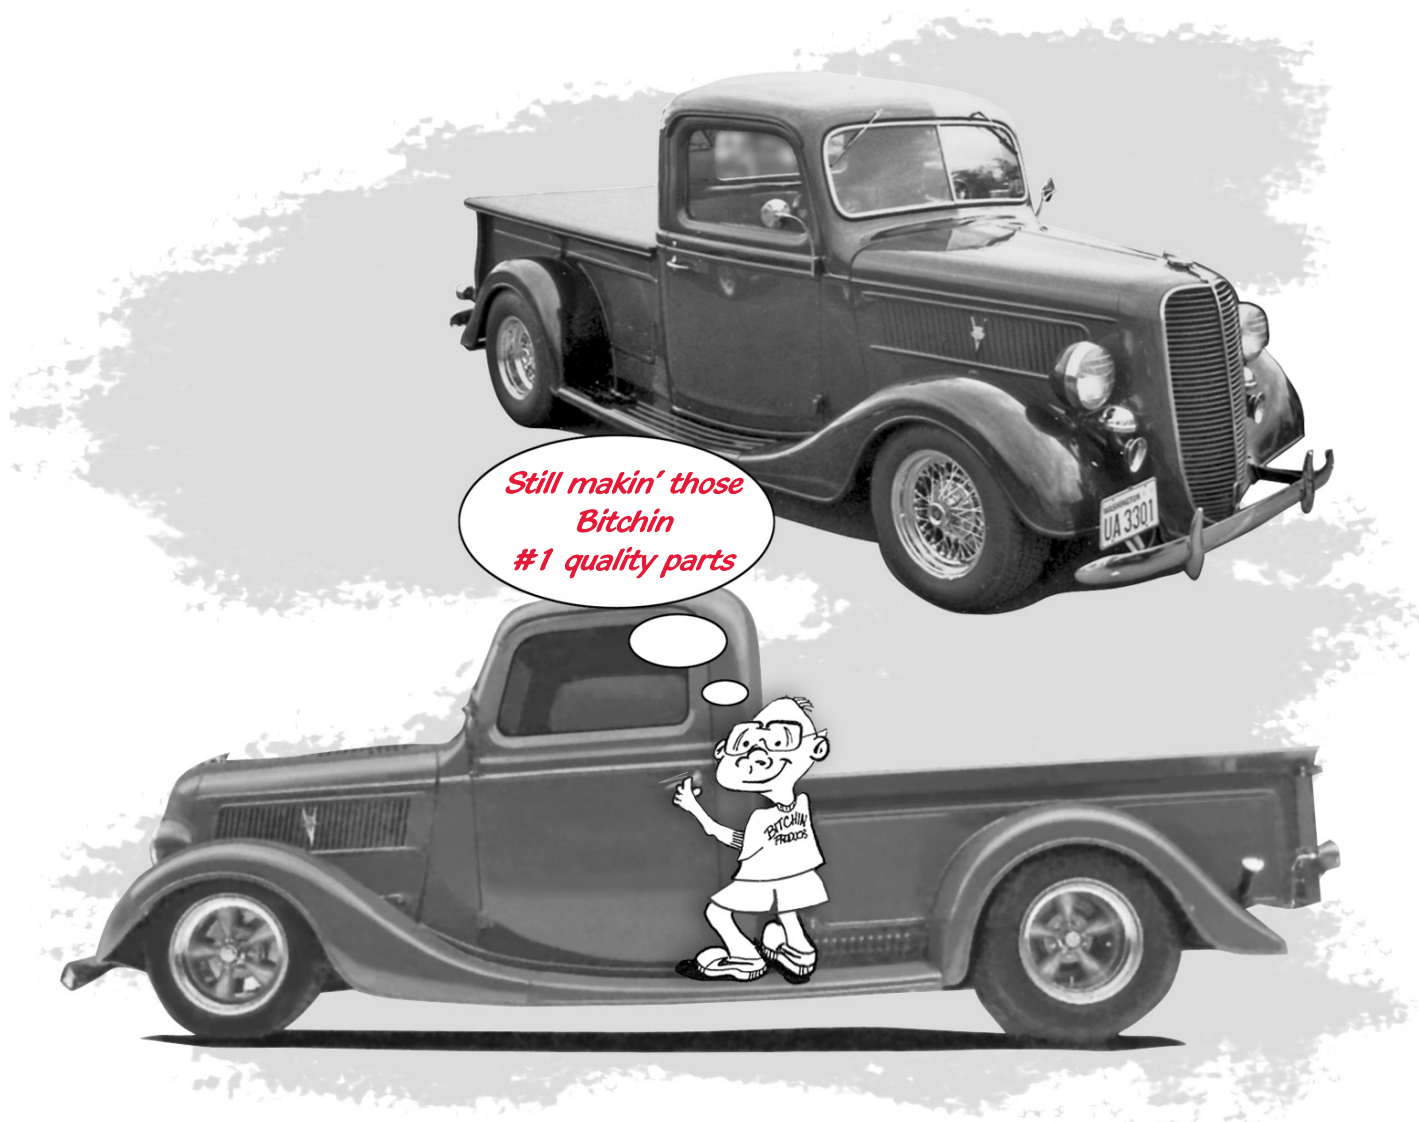

TECHNICAL INFO FOR FIREWALLS	16
37-39 FIREWALLS.....	16
35-39 FRONT FLOOR.....	16
CHECK OUT OUR SUPER SAVER KITS!	16
DEEP WHEEL WELL KITS	17
UNIVERSAL PARTS.....	17

All Prices are subject to change without notice.


FIREWALLS & TECHNICAL INFO



\$380.00

371000 37-39 FIREWALL KIT

This kit is designed to fit Ford Pickups and Panel Trucks.

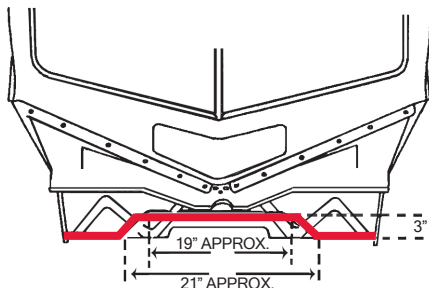

371000 37-39 FORD FIREWALL (3\"/>



These references are to help you decide which firewall kit will best fit your particular application. There are many factors which will affect your choice of kits; engine set-back, radiator core thickness, air conditioning or super chargers. You need to determine the length of the engine package you intend to install and then figure out the distance you have from the back of the radiator core to the stock or existing firewall. To do this you will know how much extra room or set-back you will need. The firewall only fits in one place in the body, but your engine can be moved forward or backward as much as needed to obtain proper clearances. If you have any questions, please call our customer service dept. @ (928) 420-6346

NOTE: These firewalls are designed for the most popular engine-transmission conversion which is Chevy engine and GMC turbo transmission. Any other engine installation (Ford, Mopar, etc.) may require rework of the bell housing area of the firewall.

FLOORBOARD KITS



\$310.00

351002 35-39 FRONT FLOOR KIT

This kit is designed to fit Ford Pickups and can be used with 351000 & 371000 firewalls.

COWL VENT FILLER



\$22.00

371037 COWL VENT FILLER 37-47 FORD PICKUP


Our Cowl Vent Fillers are made from 18 Gage cold rolled steel and are a little larger than the Stock Cowl so they can be trimmed for a perfect fit. The edges are beveled so the weld area is below surface making it easier for a flush fit. Swap meet the original, and pocket the difference.

Bitchin Super Saver Kit



371900

37-39

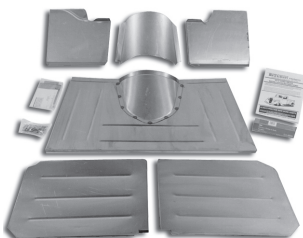


Kit includes:

- (1) 371000 Firewall (\$380)
- (1) 351002 Floorboard (\$310)

Kit Price \$635



UNIVERSAL FLOORS

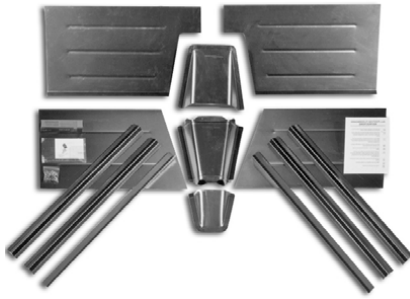

901030 \$295 All Purpose Front Floor Kit



901035 \$250 All Purpose Rear Floor Kit


BATTERY BOXES

BATTERY BOXES

Group 42	901020	\$99.00
Group 71	901006	\$99.00
Optima Box	901040	\$99.00

Mounting a battery in a street rod has always created problems, some major and some minor. Our battery box kits will solve most of the problems. The universal mounting brackets supplied with these kits allow you to choose the mounting method which best suits your application, including flush floor mounting, side mounting, or halfway through the floor for extra ground clearance. We offer three kits. The positive battery hold down, adequate ventilation and cable protection give added security to your battery installation.


Group 42: 9 3/4 L x 7 W x 7 1/2 H
 Group 71: 8 1/2 L x 7 1/4 W x 9 1/4 H
 Optima: 10 1/2 L x 7 1/4 W x 8 1/2 H

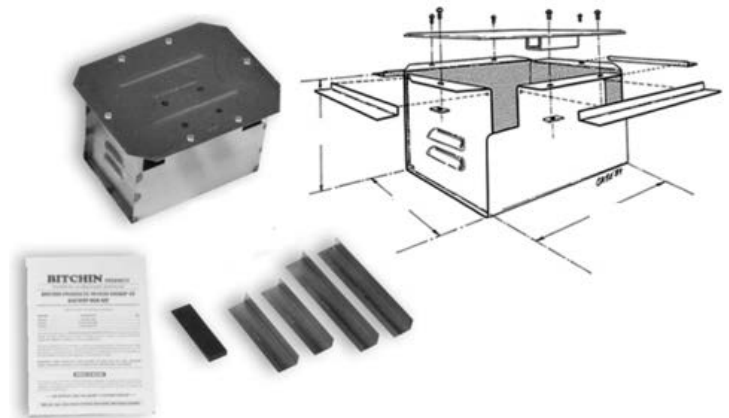

UNIVERSAL DEEP WHEEL TUB




901010 \$325 Deep Wheel Tubs Universal

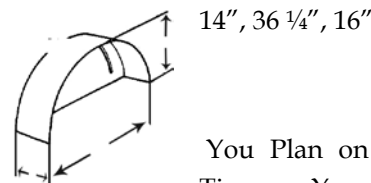

You Plan on Putting Wide Wheels and Tires on Your Car or Pro-Streeting it, We Have Just What You Need. Our Universal Deep Wheel Tub Kit (No. 901010) Was Designed for Just That. These 18 Gauge Cold Rolled All Steel Wheel Tubs Are 36" From End to End and a Full 14" Deep. You Can Install These Beauties In As Deep As You Like for Your Particular Project. All Our Deep Wheel Tub Kits Have Mounting Angles.

1940-47 FORD TRUCKS

When you want it Bitchin

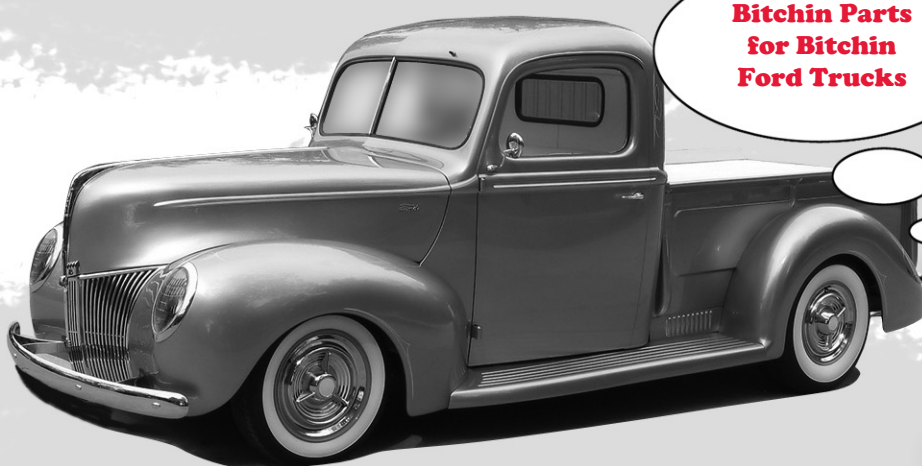

**Bitchin Parts
for Bitchin
Ford Trucks**



TECHNICAL INFO FOR FIREWALLS	19
40 47 FIREWALLS.....	19
40-47 RONT FLOORS.....	19
CHECK OUT OUR SUPER SAVER KITS!.....	20
DEEP WHEEL WELL KITS	21
UNIVERSAL PARTS.....	21


All Prices are subject to change without notice.

FIREWALLS & TECHNICAL INFO



401000 40-47 FORD FIREWALL
This firewall is made to fit the Ford Pickup and the Ford Panel truck.

\$310.00

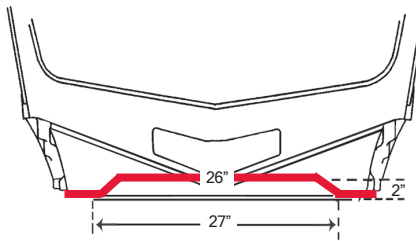


401000 40-47 FORD TRUCK FIREWALL (2" SET-BACK)



These references are to help you decide which firewall kit will best fit your particular application. There are many factors which will affect your choice of kits; engine set-back, radiator core thickness, air conditioning or super chargers. You need to determine the length of the engine package you intend to install and then figure out the distance you have from the back of the radiator core to the stock or existing firewall. To do this you will know how much extra room or set-back you will need. The firewall only fits in one place in the body, but your engine can be moved forward or backward as much as needed to obtain proper clearances. If you have any questions, please call our customer service dept. @ (928) 420-6346.

NOTE: These firewalls are designed for the most popular engine-transmission conversion which is Chevy engine and GMC turbo transmission. Any other engine installation (Ford, Mopar, etc.) may require rework of the bell housing area of the firewall.

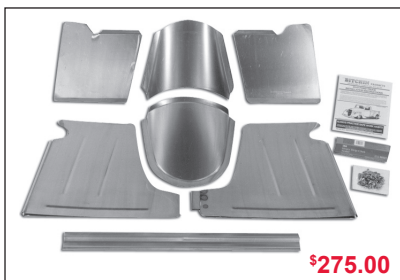


401002 40-47 FRONT FLOOR KIT
This kit is designed to fit Ford Pickup and Panel trucks with firewall #401000.

\$275.00



391000 POSI-ALIGN FENDER APRON KIT
'40-41 Pickup

\$320.00

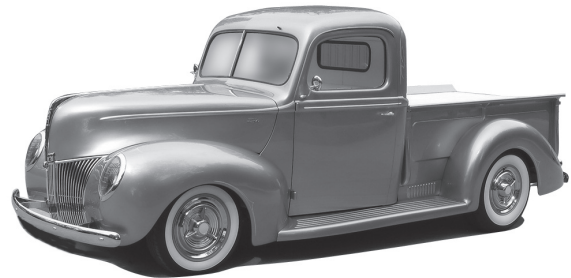


1940-1947 DASHBOARD




401019 40-47 Dashboard

\$330.00

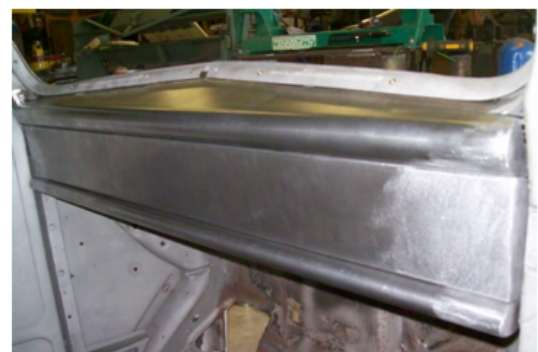

Bitchin Super Saver Kit

Ford Truck Firewall and Floorboard

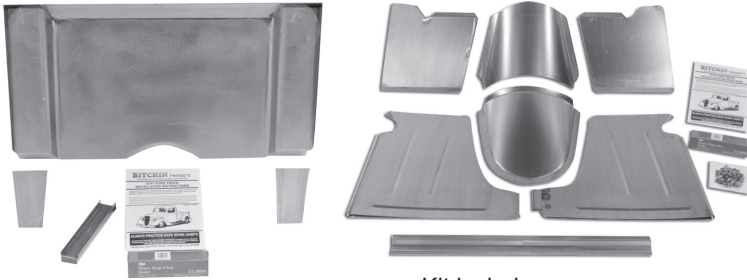

Kit includes:
(1) 401000 Firewall (\$310)
(1) 401002 Floorboard (\$275)

**SAVE
\$45⁰⁰**

Kit Price \$540



401900


40-47



www.absolutesheetmetal.com



UNIVERSAL FLOORS

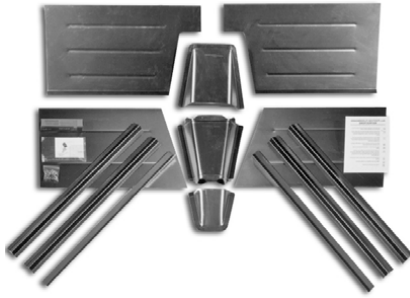

901030 \$295 All Purpose Front Floor Kit



901035 \$250 All Purpose Rear Floor Kit


BATTERY BOXES

BATTERY BOXES

Group 42	901020	\$99.00
Group 71	901006	\$99.00
Optima Box	901040	\$99.00

Mounting a battery in a street rod has always created problems, some major and some minor. Our battery box kits will solve most of the problems. The universal mounting brackets supplied with these kits allow you to choose the mounting method which best suits your application, including flush floor mounting, side mounting, or halfway through the floor for extra ground clearance. We offer three kits. The positive battery hold down, adequate ventilation and cable protection give added security to your battery installation.


Group 42: 9 3/4 L x 7 W x 7 1/2 H
Group 71: 8 1/2 L x 7 1/4 W x 9 1/4 H
Optima: 10 1/2 L x 7 1/4 W x 8 1/2 H

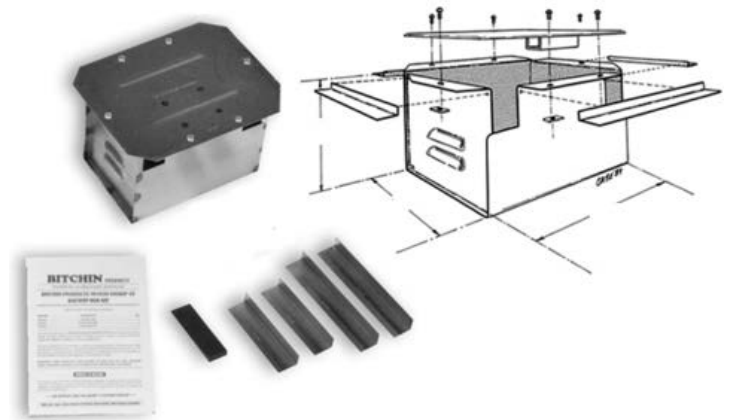

UNIVERSAL DEEP WHEEL TUB




901010 \$325 Deep Wheel Tubs Universal

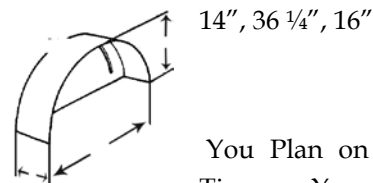

You Plan on Putting Wide Wheels and Tires on Your Car or Pro-Streeting it, We Have Just What You Need. Our Universal Deep Wheel Tub Kit (No. 901010) Was Designed for Just That. These 18 Gauge Cold Rolled All Steel Wheel Tubs Are 36" From End to End and a Full 14" Deep. You Can Install These Beauties In As Deep As You Like for Your Particular Project. All Our Deep Wheel Tub Kits Have Mounting Angles.

1948-52 FORD TRUCKS

When you want it Bitchin

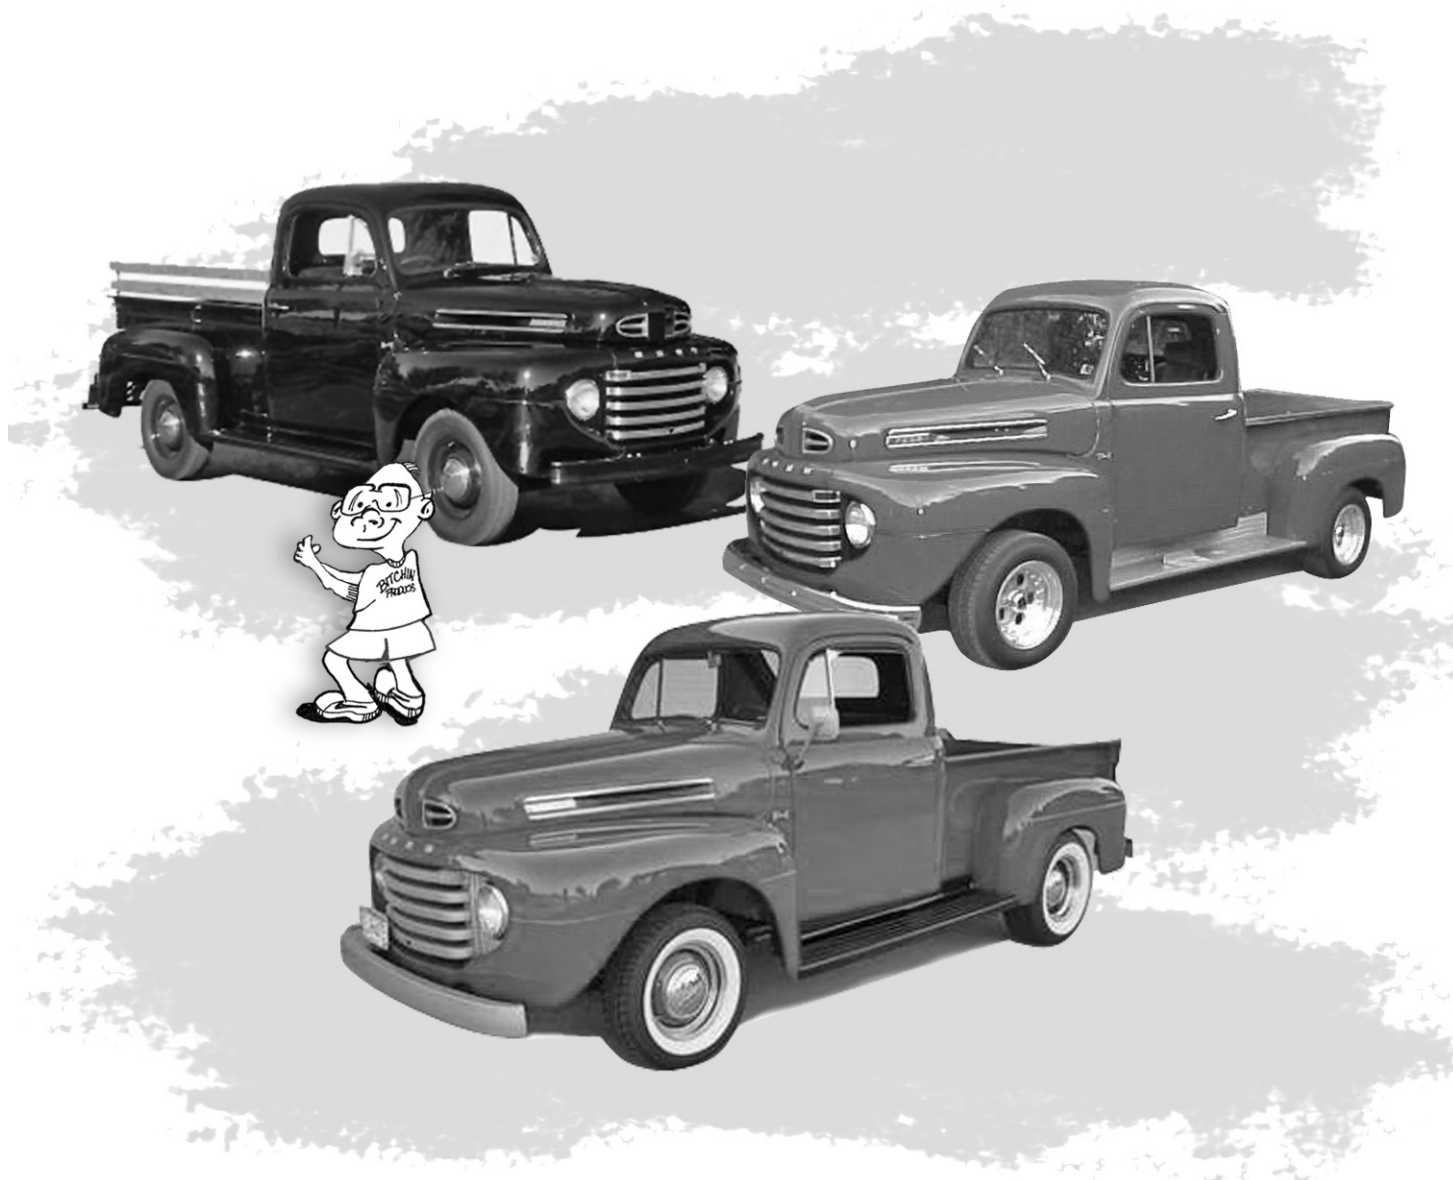

TECHNICAL INFO FOR FIREWALLS	23
48-52 FIREWALLS.....	23
48-52 FRONT FLOORS.....	23
CHECK OUT OUR SUPER SAVER KITS!.....	23
DEEP WHEEL WELL KITS	24
COWL VENT FILLERS.....	25
UNIVERSAL PARTS.....	26

All Prices are subject to change without notice.

FIREWALLS & TECHNICAL INFO


These references are to help you decide which firewall kit will best fit your particular application. There are many factors which will affect your choice of kits; engine set-back, radiator core thickness, air conditioning or super chargers. You need to determine the length of the engine package you intend to install and then figure out the distance you have from the back of the radiator core to the stock or existing firewall. To do this you will know how much extra room or set-back you will need. The firewall only fits in one place in the body, but your engine can be moved forward or backward as much as needed to obtain proper clearances. If you have any questions, please call our customer service dept. @ (928) 420-6346.

NOTE: These firewalls are designed for the most popular engine-transmission conversion which is Chevy engine and GMC turbo transmission. Any other engine installation (Ford, Mopar, etc.) may require rework of the bell housing area of the firewall.



\$340.00


481000 48-52 TRUCK FIREWALL

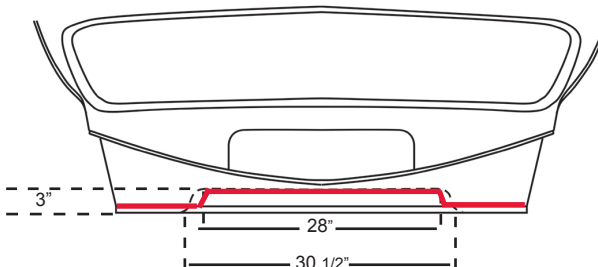

481000 48-52 TRUCK FIREWALL



FLOORBOARD KITS

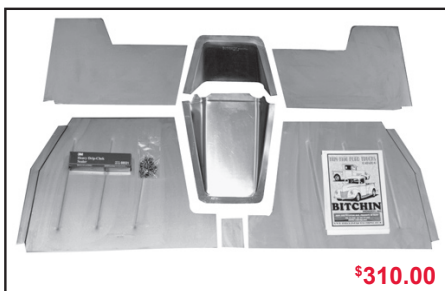

\$310.00

481004 48-52 FRONT FLOOR



\$145.00

481011 48-52 CENTER FLOOR



\$155.00

481036 48-52 REAR FLOOR


These floor kits are made of 16 & 18 gauge cold rolled steel locally here in Prescott, AZ. Each comes with detailed instructions. They not only get rid of the rust, but they match our setback firewall for these late model engines and transmissions.

Bitchin' Super Saver Kit

Ford Truck Firewall and Floorboard



Kit Price \$598

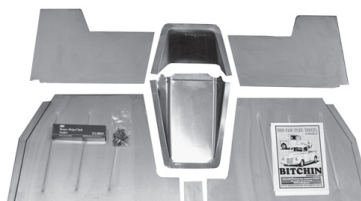

Now, That's a Bitchin' Deal!

48-52

481900

Kit includes:

- (1) 481000 Firewall (\$340)
- (1) 481004 Floorboard (\$310)

SAVE
\$52.00




1928-40 FORD CARS DEEP WHEEL WELLS


VEHICLE YEAR and TYPE	HEIGHT	LENGTH	DEPTH	PART #	PRICE
28'-29' Sedan or Phaetons	16"	26"	8"	281023	\$305.00
28'-29' Coupe or Roadster	16 1/4"	35"	8"	281024	\$305.00
30'-31' Sedan	16"	28 1/2"	8"	301019	\$305.00
32' Coupe or Roadster	16 1/8"	35 1/8"	8"	321028	\$305.00
32' Sedan	13 7/8"	34 3/8"	8"	321092	\$305.00
33'-34' Coupe, Roadster or Sedan	15"	37 5/8"	8"	331032	\$320.00
35' & Later Universal	16"	36 1/4"	8"	901010	\$325.00




281023 28'-29' Sedan or Phaetons

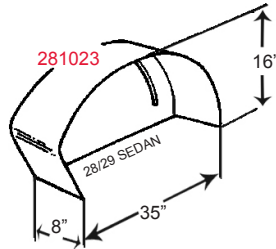


281024 28'-29' Coupe or Roadster

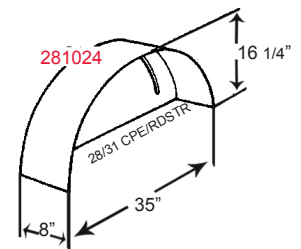


301019 30'-31' Sedan

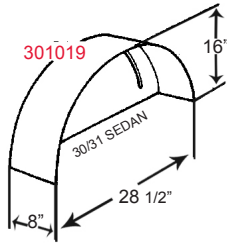


321028 32' Coupe or Roadster

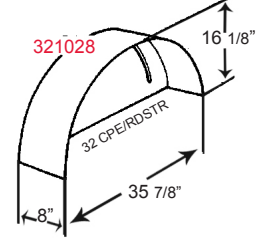


321092 32' Sedan

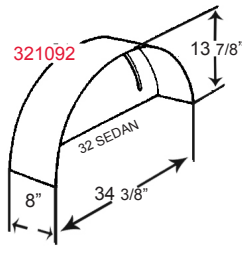

331032 33'-34' Coupe, Roadster or Sedan

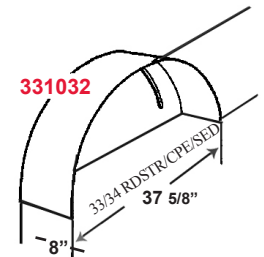

901010 35'-40' Universal

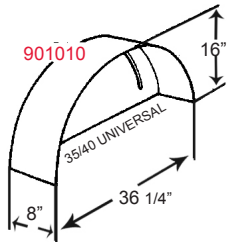

If you plan on putting wide wheels and tires on your car or pro-streeting it, we have just what you need. Our universal deep wheel well kit (B.P. No. 901010) was designed just for that purpose. These 18 gauge cold rolled all steel wheel tubs are 36" from end to end and a full 14" deep. You can install these beauties in as deep as you like for your particular project.

Our deep wheel well kits will help you eliminate tire interference often encountered with those wide pro-street tires, off-set wheels, independent suspension or normal body roll on sedans. Our wheel wells come in standard width of 8". Deeper wheel wells can be special ordered for an additional cost of \$35.00.

COWL VENT FILLERS

CARS


CAR YEAR / TYPE	PART #	PRICE
32' Ford Car	321097	\$22.00
33'-34' Ford Car	331084	\$22.00
35'-36' Ford Car	351082	\$22.00
37'-40' Ford Car	371037	\$22.00
41'-48' Ford & Mercury Car	421083	\$22.00
37'-39' Chevy Car	737200	\$22.00
40' Chevy Car	740111	\$22.00

TRUCKS


TRUCK YEAR / TYPE	PART #	PRICE
32'-34' Ford Truck	321097	\$22.00
35'-36' Ford Truck	331084	\$22.00
37'-47' Ford Truck	371037	\$22.00
48'-52' Ford Truck	481037	\$22.00
47'-53' Chevy Truck (Top)	751023	\$22.00
47'-50' Chevy Truck (Side)	751024	\$22.00
54'-55' Chevy Truck (Top)	751060	\$22.00



321097 32' Ford Car

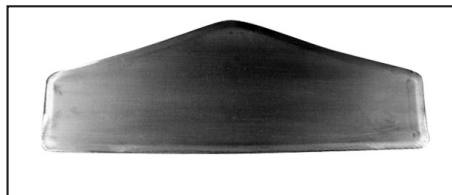


331084 33'-34' Ford Car & 35'-36' Ford Truck

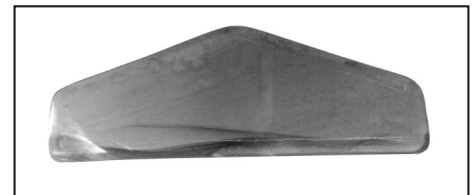

351082 35'-36' Ford Car




371037 37'-40' Ford Car & 37'-47' Ford Truck

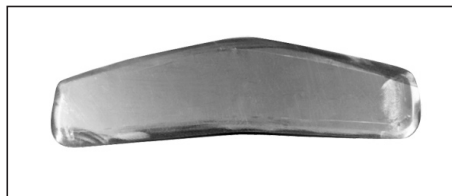


421083 41'-48' Ford & Mercury Car




481037 48'-52' Ford Truck

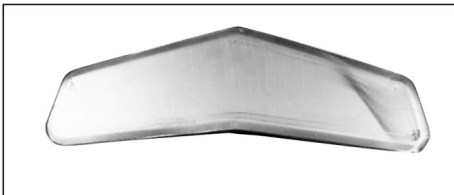

737200 37'-39' Chevy Car

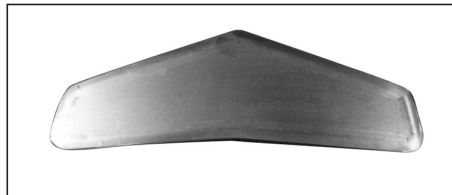


740111 40' Chevy Car

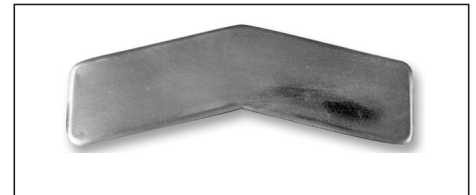

751023 47'-53' Chevy Truck (Top)



751024 47'-50' Chevy Truck (Side)

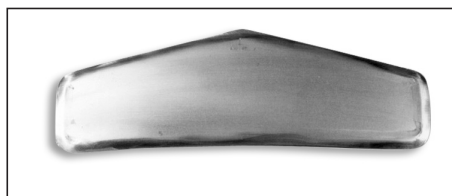

751060 54'-55' Chevy Truck (Top)




BITCHIN

Our Cowl Vent Fillers are made from 18 Gage cold rolled steel and are a little larger than the Stock Cowl so they can be trimmed for a perfect fit. The edges are beveled so the weld area is below surface making it easier for a flush fit. Swap meet the original, and pocket the difference.

BATTERY BOXES


Group 42	901020	\$99.00
Group 71	901006	\$99.00
Optima Box	901040	\$99.00

Mounting a battery in a street rod has always created problems, some major and some minor. Our battery box kits will solve most of the problems. The universal mounting brackets supplied with these kits allow you to choose the mounting method which best suits your application, including flush floor mounting, side mounting, or halfway through the floor for extra ground clearance. We offer three kits. The positive battery hold down, adequate ventilation and cable protection give added security to your battery installation.

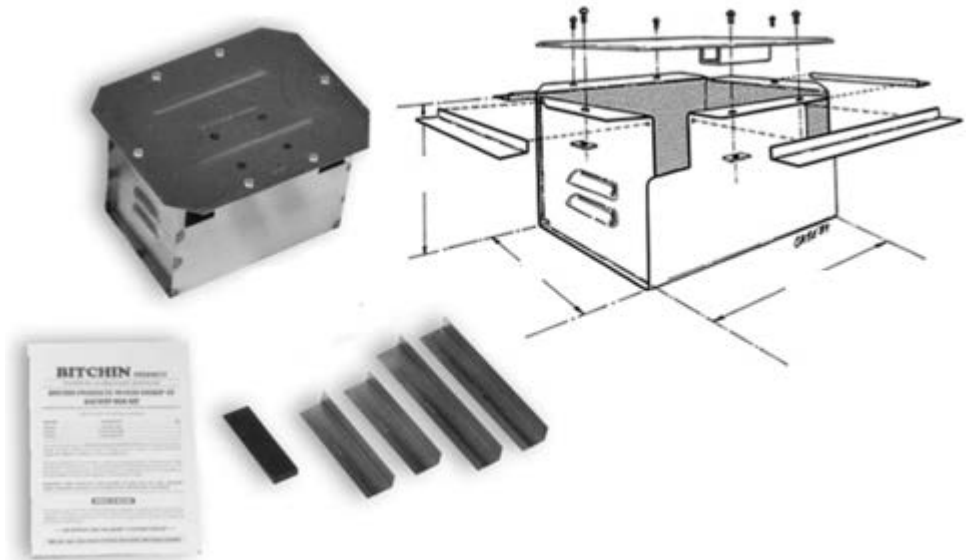

Group 42: 9 3/4 L x 7 W x 7 1/2 H
 Group 71: 8 1/2 L x 7 1/4 W x 9 1/4 H
 Optima: 10 1/2 L x 7 1/4 W x 8 1/2 H

UNIVERSAL FLOORS

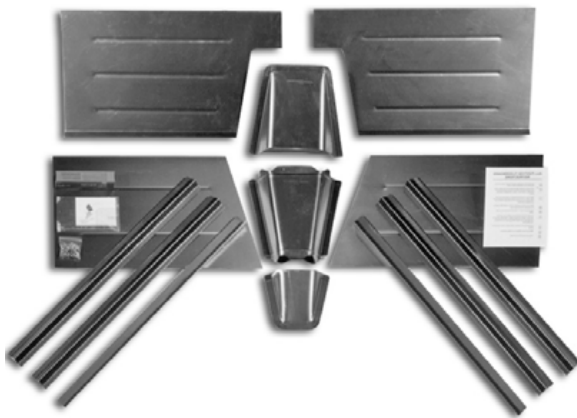


901030 \$295 All Purpose Front Floor Kit



901035 \$250 All Purpose Rear Floor Kit

Bitchin T-Shirts Now Available!

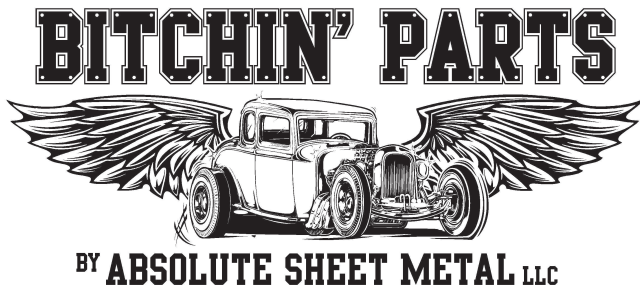

Jeff Hill, Owner, modeling our t-shirt while working in his shop.


ONLY \$15.95!

Sizes: Medium to 3XL

Black or White T-Shirt

Item number: BT(size) & WT(size)

ex: WT2XL = White Tshirt Size 2XL

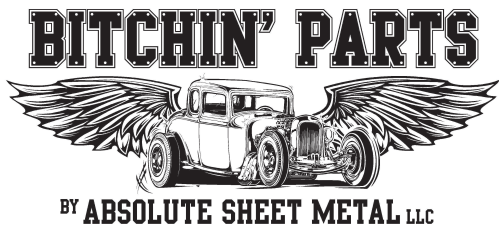

ORDER SHEET

ABSOLUTE SHEET METAL, LLC,
2420 W. Road 2 S. Chino Valley, AZ 86323

[illegible]

Email or Fax Order Form.
Personal Checks Must Clear Your Bank - Allow 3 Extra Weeks

Money Order/_____

Personal _____

Check Amount _____

Check No. _____

Card Type _____

Card Number _____

Expiration Date _____

Signature _____

[illegible]

Card Type _____

Card Number _____

Expiration Date _____

Signature _____